


Z109UI2-1
**V - mA
converter module
with galvanic insulation**

Chapter index	Page
1. Preliminary warnings	2
2. Description and characteristics	2
2.1 Module description	
2.2 General characteristics and features	
3. Technical specifications	2
3.1 Input	
3.2 Outputs	
3.3 Connections	
3.4 Power supply	
3.5 Module case	
3.6 Environmental conditions	
4. Preliminary instructions for use	4
5. Electrical connections	4
5.1 Safety measures before use	
5.2 USB interface	
5.3 Connections	
5.4 Power supply	
5.5 Voltage or current input	
5.6 Analog output	
6. Configuration	6
6.1 Input selection / Measuring scale	
6.2 START and END setting at will	
6.3 Output selection	
6.4 Configuration through a PC	
6.5 Jumpers position	
6.6 LED indications on the frontal panel	
7. Purchase order code	8
8. Module layout	8
9. Decommissioning and disposal	8


SENECA s.r.l.

Via Austria, 26 – 35127 – PADOVA – ITALY

Tel. +39.049.8705355 – 8705359 Fax. +39.049.8706287

 Internet site: www.seneca.it Technical assistance: support@seneca.it

 Commercial reference: sales@seneca.it

This document is property of SENECA srl. Duplication and reproduction of it are forbidden (though partial), if not authorized. Contents of present documentation refers to products and technologies described in it. Though we strive for reach perfection continually, all technical data contained in this document may be modified or added due to technical and commercial needs. It's impossible eliminate mismatches and discordances completely. Contents of present documentation is anyhow subjected to periodical revision. If you have any questions don't hesitate to contact our structure or to write us to e-mail addresses as above mentioned.

1. PRELIMINARY WARNINGS

Before carrying out any operation it's mandatory to read all the content of this user Manual. Only electrical-skilled technicians can use the module described in this user Manual. Only the Manufacturer is authorized to repair the module or to replace damaged components. No warranty is guaranteed in connection with faults resulting from improper use, from modifications or repairs carried out by Manufacturer-unauthorised personnel on the module, or if the content of this user Manual is not followed.

2. DESCRIPTION AND CHARACTERISTICS

2.1 MODULE DESCRIPTION

The Z109UI2 module acquires an voltage or current input signal, converts it to an analog format and send it to an universal isolated output.

2.2 GENERAL CHARACTERISTICS AND FEATURES

- Voltage or current input type: **V or mA**.
- Sensor powered by 2-wire technique: 20 V $\overline{\text{DC}}$ stabilised, 20mA max, short-circuit protected.
- Measurement and re-transmission on isolated analog output, with voltage and current output.
- DIP-switch for selecting: type of input, START-END, output mode (zero elevation, scale inversion), output type (mA or V).
- Front panel indicating: power on, off scale or setting error.
- 3-points insulation: 1500 V \sim .




3. TECHNICAL SPECIFICATIONS

3.1 INPUT

Voltage input:	Bipolar from 100 mV up to 20 V in 9 scales, input impedance 1 M Ω , resolution max 15 bit + sign.
Current input:	Bipolar up to 20 mA, input impedance \sim 50 Ω , resolution: 1 μ A.
Sampling frequency:	240 sps with 11 bits resolution.
Response time:	35 ms with 11 bits resolution.

3.2 OUTPUTS

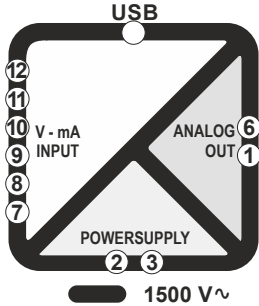Output:	I: 0-20 / 4-20 mA, max load resistance 600 Ω V: 0-5 V / 0-10 V / 1-5 V / 2-10 V, min load resistance 2 k Ω Resolution: 2.5 μ A / 1.25 mV.
Data memory:	EEPROM for all configuration data; storage time: 40 years.

INSULATIONS 1500V~	STANDARDS	
 <p>1500 V~ insulating voltage is among:</p> <ul style="list-style-type: none"> - power supply - analog input - analog output 	 	<p>The module complies with the following standards:</p> <ul style="list-style-type: none"> EN61000-6-4 (electromagnetic emission, in industrial environment) EN61000-6-2 (electromagnetic immunity, in industrial environment) EN61010-1 (safety) <p>Notes:</p> <ul style="list-style-type: none"> - Use with copper conductor. - Use in Pollution Degree 2 Environment - Power Supply must be Class 2 - When supplied by an Isolated Limited Voltage and/or Limited Current power supply, a fuse rated max 2.5 A shall be installed in the field.

Errors referred to maximum measuring range:	Calibration Error	Thermal Coefficient	Linearity Error	EMI (1)
Voltage / Current input	0.1%	0.01%/°K	0.05 %	<1%
Voltage output (2)	0.3%	0.01%/°K	0.01%	

(1) EMI: electromagnetic interference.

(2) Values to be added to the errors of the selected input.

3.3 CONNECTIONS	
USB Interface	Micro USB connector (frontal panel)

3.4 POWER SUPPLY	
Supply Voltage	10-40 V $\overline{\text{=}}$, 19-28 V~ 50-60 Hz, through screw terminals: 2 – 3
Power supply unit	Classe 2
Power consumption	1.6 W @ 24 V $\overline{\text{=}}$ with output 20 mA; Max: 2.5 W

3.5 MODULE CASE	
Case	PA6, black color
Dimensions	Width L=100mm; Height H=112mm; Depth W=17,5mm
Board terminals	Removable 3 way screw terminals: pitch 5.08mm, section 2.5mm ²
Protection class	IP20

3.6 ENVIRONMENTAL CONDITIONS	
Operating Temperature	-10°C – +60°C (UL: -10°C – +60°C)

3.6 ENVIRONMENTAL CONDITIONS

Humidity	30 – 90 % a 40°C not condensing
Pollution degree	2 (Maximum environment pollution during operations)
Storage Temperature	-20°C – +85°C

4. PRELIMINARY INSTRUCTIONS FOR USE

The module was designed to be installed on omega IEC EN 60715 rail in vertical position.

We suggest the module installation in the lower part of the control panel.

In order to ensure best performance and longest working life module, please ensure adequate ventilation to the modules and avoid placing raceways or other objects which obstructs the ventilation slots.

It's forbidden to install the module near or above heat sources.

«**Severe operating conditions**» are as follows:

- High power supply voltage: $>30\text{ V} \overline{\text{=}}$, $26\text{ V} \sim$.
- The module supplies power to the sensor at input.
- Output used as current generator (connected to a passive module).

If the modules are installed side by side, **separate them by at least 5 mm** in the following cases:

- If the panel operating temperature exceeds 45°C and at least one of the severe operating conditions exists;
- If the panel operating temperature exceeds 35°C and at least two of the severe operating conditions exist.

5. ELECTRICAL CONNECTIONS

5.1 SAFETY MEASURES BEFORE USE


To satisfy the electromagnetic compliance requirements:

- Use shielded cables for signals transmission;
- The cable shield must be connected to an earth wire used specifically for instrumentation;
- Avoid placing signal cables near power cables and power appliances (inverters, motors, induction ovens etc...).

5.2 USB INTERFACE

The module has a microUSB connector, you can configure it through APP and/or software.

For more information please see www.seneca.it/products/z109ui2.

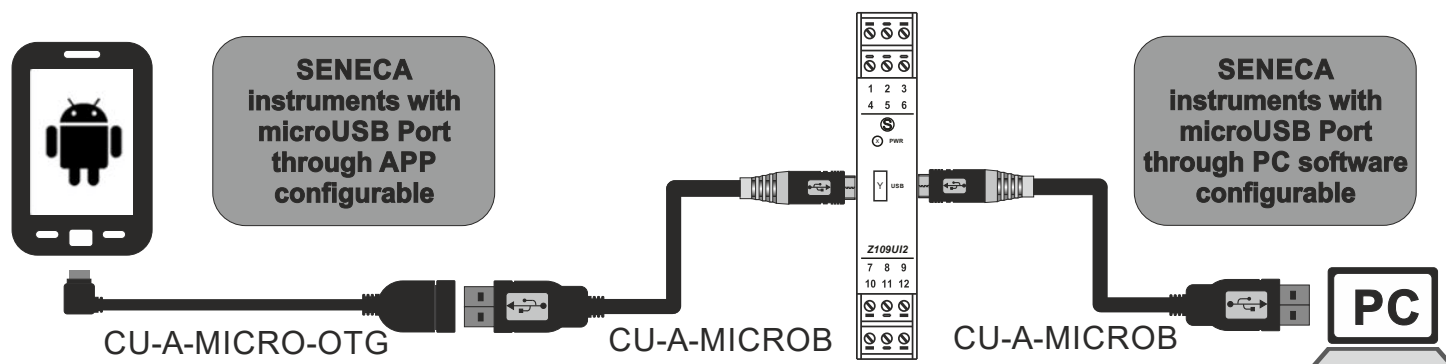


5.3 CONNECTIONS



Please provide the module with supply voltage $< 40\text{ V} \overline{\text{=}}$ or $< 28\text{ V} \sim$.


These upper limits must not be exceeded to avoid serious damage to the module.

5.4 POWER SUPPLY

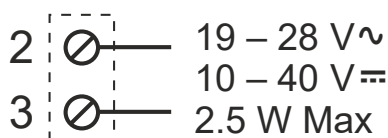


5.5 VOLTAGE OR CURRENT INPUT

VOLTAGE INPUT: V

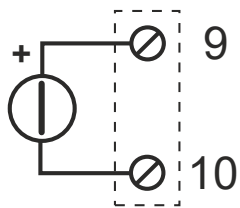


V input > 150 mV

VOLTAGE INPUT: mV

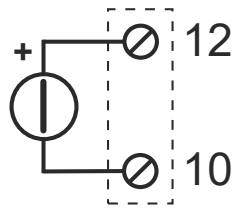

V input < 150mV


CURRENT INPUT

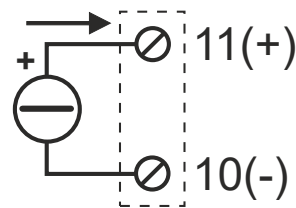

Passive module

The sensor power the loop (mA)

mA input

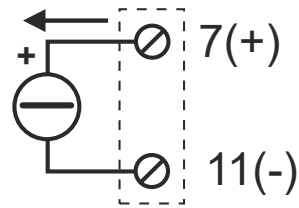

Active module


The module power the loop (mA)

mA input (2 wires)

5.6 ANALOG OUTPUT


RE-TRANSMITTED OUTPUT

Voltage

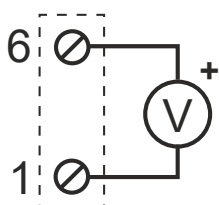


V output

Generated current (3)

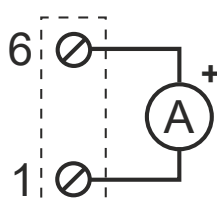

mA output

External power Supply current (4)

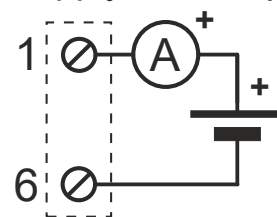

mA output

(3) Powered active output to be connected to passive inputs.

(4) Unpowered passive output to be connected to active inputs.

In order to select this feature please see: **SETTINGS THROUGH INTERNAL JUMPERS.**

Electrical ratings for UL:

Output: 10 V_{DC}, 20 mA

Input: 20 V_{DC}, 20 mA

Operating Temp.: -20 – +60°C

6. CONFIGURATION

6.1 INPUT SELECTION / MEASURING SCALE

You can select the type of input by setting SW1 DIP switches placed on the side of the module. Every type of input is matched to a certain number of beginning and end scale values which can be selected through SW2 DIP switches.

The following table lists possible START and END values according to the type of input selected. The left column show the DIP-switches setting in order to select the START and END scale desired.



Note: DIP-switches must be set while the module is powered down, otherwise, the module may be damaged.

(*)START and END setted in the memory by a PC or by the programming push-buttons.



SW2 DIP-switch in OFF ↓ position

SCALE n°	Voltage		Current	
	START	END	START	END
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 1	(*)	(*)	(*)	(*)
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 2	0 V	100 mV	0 mA	1 mA
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 3	400 mV	200 mV	1 mA	2 mA
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 4	1 V	500 mV	4 mA	3 mA
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 5	2 V	1 V	-1 mA	4 mA
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 6	-5 V	5 V	-5 mA	5 mA
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 7	-10 V	10 V	-10 mA	10 mA
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 8	-20 V	20 V	-20 mA	20 mA

SW1: INPUT SELECTION								
POSITIO		INPUT	POSITION		INPUT			
1	2	3	4	1	2	3	4	
TYPE				TYPE				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	V	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	mA

SW2: START and END							
POSITIO			START	POSITIO			END
1	2	3	SCALE n°	4	5	6	SCALE n°
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	1
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	2
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	4
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	5
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	6
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	7
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	8

LEGENDA ↑ ON ↓ OFF

6.2 START AND END SETTING AT WILL

The START and END push-buttons under the SW2 DIP-switch group allow to set the beginning and end scale at will, within the scale pre-set through the dip-switches. To obtain this facility it is necessary to use a suitable signal generator, able to furnish the desired values of beginning and end scale.

The procedure is following:

1. Set through dip-switches the type of input, START and END measurement which include the required beginning and end values.
2. Power up the module.
3. Supply a calibrator or simulator of the signal you wish to measure and re-transmit.
4. Set the required START value on the calibrator (or other instrument).
5. Press the START push-button for at least 3 sec. The green LED on the front panel flashes to indicate the value has been stored.
6. Repeat points 4 and 5 for the required END value.
7. Power off the module and set to OFF position the dip-switches of group SW2, correspondent to the settings of START and END values.

The module is now configured for the required start and end scale.

In order to re-program it (e.g. for a different type of input) repeat the whole procedure.

6.3 OUTPUT SELECTION

SW2 group DIP-switches 7 and 8 enable you to set the output with or without zero elevation and/or as a normal or reversed output. The SW3 DIP-switch group enables you to select the output type.

Note:The DIP-switches must be set while the module is powered down, avoiding electrostatic discharge, otherwise the module may be damaged.


SW2: SCALE AND MODE OUTPUT			
POSITION	OUTPUT	POSITION	OUTPUT
7 8	RANGE	7 8	MODE
<input type="checkbox"/> X	0..20mA / 0..10V	X <input type="checkbox"/>	NORMAL
<input type="checkbox"/> X	4..20mA / 2..10V	X <input type="checkbox"/>	REVERSE

SW3: OUTPUT TYPE			
POSITION	OUTPUT	POSITION	OUTPUT
1 2	TYPE	1 2	TYPE
<input type="checkbox"/> <input type="checkbox"/>	VOLTAGE	<input type="checkbox"/> <input type="checkbox"/>	CURRENT
LEGEND	<input type="checkbox"/> ↑ ON		<input type="checkbox"/> ↓ OFF

6.4 CONFIGURATION THROUGH A PC

By using a PC and EASY SETUP software, it is possible to set: input type, input start and end of scale, measurement type, rejection filter, resolution, output type, output start and end of scale, conversion value, upper and lower limits, output value if there is an error and digital output filter.

6.5 JUMPERS POSITION

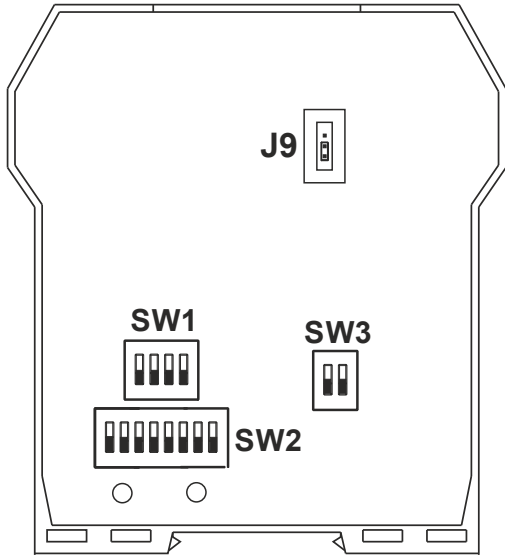

SETTINGS THROUGH INTERNAL JUMPERS

ACTIVE / PASSIVE OUTPUT

Active Output



Passive Output



6.6 LED INDICATIONS ON THE FRONTAL PANEL

LED	LED STATE	LED MEANING
PWR Green	ON	Power supply presence
	Blinking (freq: 1 flash./sec)	Out of Scale, Burn Out or Internal failure
	Blinking (freq ≈ 2 flash./sec)	DIP-switches setting error

7. PURCHASE ORDER CODE

ORDER CODE	SPECIFICATIONS
CU-A-MICROB	USB-microUSB 1 mt communication cable.
CU-A-MICRO-OTG	Adapter cable for smartphone.

8. MODULE LAYOUT

FRONTAL PANEL	MODULE DIMENSIONS

9. DECOMMISSIONING AND DISPOSAL



Disposal of Electrical & Electronic Equipment (Applicable throughout the European Union and other European countries with separate collections programs). This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical & electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of the product, please contact your local city office, waste disposal service of the retail store where you purchased this product.