


PROFINET Network Adapter

RIO3-PNA User Manual

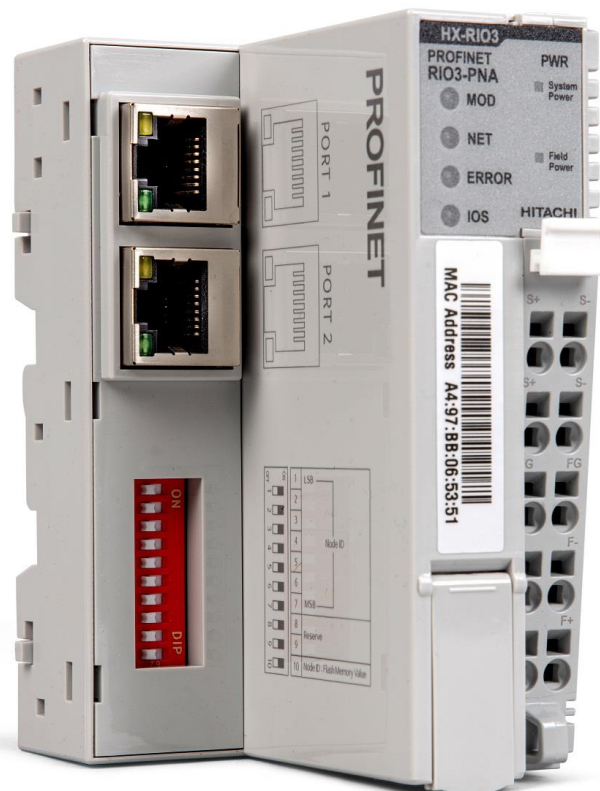

DOCUMENT CHANGE SUMMARY				
REV	PAGE	REMARKS	DATE	EDITOR
1.01	All		Feb 2021	Faber
1.01	40	Remove product list table and add a reference	Aug 2021	Faber

Contents

1. Important Notes.....	5
1.1. Safety Instruction.....	6
1.1.1. Symbols.....	6
1.1.2. Safety Notes.....	6
1.1.3. Certification.....	6
2. Specification.....	7
2.1. The Interface.....	7
2.1.1. RIO3-PNA (PROFINET).....	7
2.2. Specification.....	8
2.2.1. General Specification.....	8
2.2.2. Interface Specification.....	9
2.3. RIO3-PNA LED Indicator.....	10
2.3.1. Module Status LED (MOD).....	10
2.3.2. Network Status LED (NET).....	10
2.3.3. Error Status LED (ERROR).....	11
2.3.4. Extension Module Status LED (IOS).....	11
2.3.5. Field-, System Power Status (Field Power, System Power LED).....	11
3. Dimension.....	12
3.1. RIO3-PNA.....	12
4.1 Total Expansion.....	13
4.2. Plugging and Removal of the Components.....	13
4.3. Module mounting.....	14
5. Convenience Function.....	16
5.1. IAP Functionality.....	16
6. RIO3-PNA Communication Interface.....	17
6.1. RJ-45 Socket.....	17
6.2. Dip Switch.....	17
6.3. RS232 Port for MODBUS/RTU, Touch panel.....	18
7. I/O Process Image Map.....	19
7.1. Mapping Data into Image Table.....	20
7.1.1. Discrete Input Module.....	20
7.1.2. Discrete Output Module.....	21
7.1.3. Analog Output Module.....	23
7.2. Example of Input Process Image (Input Register) Map.....	24
7.3. Example of Output Process Image (Output Register) Map.....	25
7.4. MODBUS Special Register Map.....	26
7.4.1. Adapter Identification Special Register (0x1000, 4096).....	26
7.4.2. Other Time Special Register (0x1028, 4136).....	26
7.4.3. Adapter IP/MAC Address Special Register (0x1050, 4176).....	26
7.4.4. Adapter Information Special Register (0x1100, 4352).....	27
7.4.5. Expansion Slot Information Special Resister (0x2000, 8192).....	28
8. Parameter.....	31
8.1. RIO3-PNA Parameter.....	31
8.2. RIO3-PNA PROFINET IO Characteristics.....	31
8.2.1. Device Identity.....	31
8.2.2. Device Access Point.....	31

9. TIA Portal V14	33
9.1. Import GSDML file.....	33
9.2. Hardware configuration setting.....	34
9.3. I/O test	36
9.4. Change I/O parameter	38
10. Troubleshooting.....	39
10.1. How to diagnose by LED indicator	39
APPENDIX A.....	40
A.1. Product List	40
A.2. Glossary.....	40

1. Important Notes

Solid state equipment has operational characteristics differing from those of electromechanical equipment.

Safety Guidelines for the Application, Installation and Maintenance of Solid-State Controls describes some important differences between solid state equipment and hard-wired electromechanical devices.

Because of this difference, and because of the wide variety of uses for solid state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.

In no event will HITACHI be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any installation, HITACHI cannot assume responsibility or liability for actual use based on the examples and diagrams.

Warning!

- ✓ **If you don't follow the directions, it could cause a personal injury, damage to the equipment or explosion**
- Do not assemble the products and wire with power applied to the system. Else it may cause an electric arc, which can result into unexpected and potentially dangerous action by field devices. Arching is explosion risk in hazardous locations. Be sure that the area is non-hazardous or remove system power appropriately before assembling or wiring the modules.
- Do not touch any terminal blocks or IO modules when system is running. Else it may cause the unit to an electric shock or malfunction.
- Keep away from the strange metallic materials not related to the unit and wiring works should be controlled by the electric expert engineer. Else it may cause the unit to a fire, electric shock or



Caution!

malfunction


- ✓ **If you disobey the instructions, there may be possibility of personal injury, damage to equipment or explosion. Please follow below Instructions.**
- " Check the rated voltage and terminal array before wiring. Avoid the circumstances over 50°C of temperature. Avoid placing it directly in the sunlight.
- " Avoid the place under circumstances over 85% of humidity.
- " Do not place Modules near by the inflammable material. Else it may cause a fire.
- " Do not permit any vibration approaching it directly.
- " Go through module specification carefully, ensure inputs, output connections are made with the specifications. Use standard cables for wiring.
- " Use Product under pollution degree 2 environment.

1.1. Safety Instruction

1.1.1. Symbols

<p>DANGER</p> 	<p>Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death property damage, or economic loss</p>
<p>IMPORTANT</p>	<p>Identifies information that is critical for successful application and understanding of the product</p>
<p>ATTENTION</p> 	<p>Identifies information about practices or circumstances that can lead to personal injury, property damage, or economic loss. Attentions help you to identify a hazard, avoid a hazard, and recognize the consequences</p>

1.1.2. Safety Notes

<p>DANGER</p> 	<p>The modules are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the modules, ensure that the environment (persons, workplace and packing) is well grounded. Avoid touching conductive components, G-BUS Pin.</p>
--	---


1.1.3. Certification



2. Specification

2.1. The Interface

2.1.1. RIO3-PNA (PROFINET)

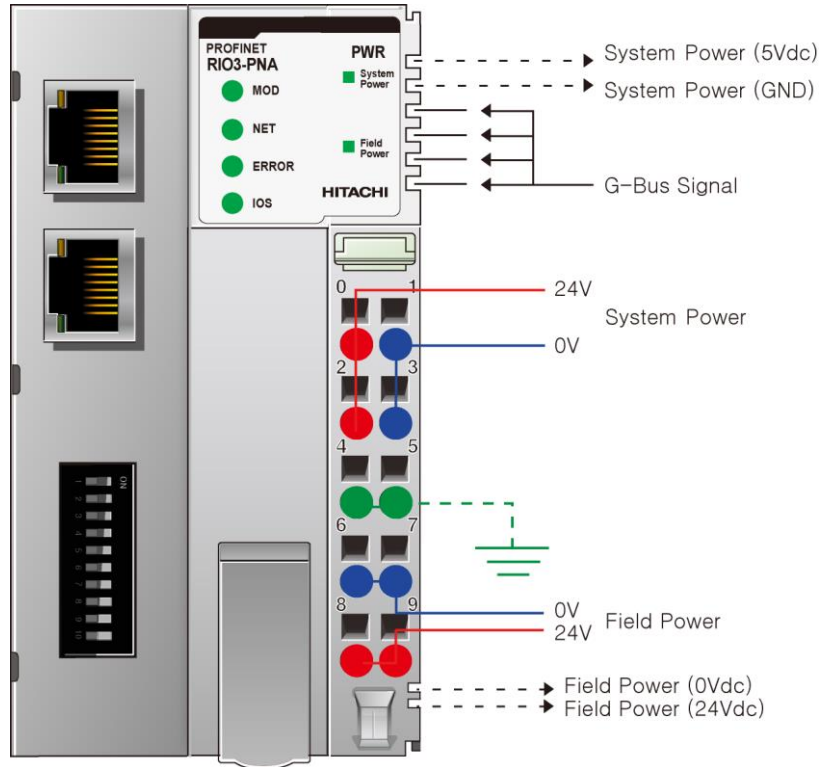

System power and Field power must be supplied separately.

Pin No.	Signal Description	Signal Description	Pin No.
0	System Power, 24V	System Power, Ground	1
2	System Power, 24V	System Power, Ground	3
4	F.G	F.G	5
6	Field Power, Ground	Field Power, Ground	7
8	Field Power, 24V	Field Power, 24V	9

2.2. Specification


2.2.1. General Specification

General specification	
UL System Power	Supply voltage : 24Vdc nominal, Class 2
System Power	Supply voltage : 24Vdc nominal Supply voltage range : 15~30Vdc Protection : Output current limit (Min. 1.5A) Reverse polarity protection
Power Dissipation	70mA typical @ 24Vdc
Current for I/O Module	1.5A @ 5Vdc
Isolation	System power to internal logic : Non-isolation System power I/O driver : Isolation
UL Field Power	Supply voltage : 24Vdc nominal, Class 2
Field Power	Supply voltage : 24Vdc typical (Max. 30Vdc) * Field Power Range is different depending on IO Module series. Refer to IO Module`s Specification.
Max. Current Field Power Contact	DC 10A Max
Wiring	I/O Cable Max. 2.0 mm ² (AWG 14)
Torque	0.8 Nm(7 lb-in)
Weight	172g
Module Size	54mm x 99mm x 70mm
Environmental specification	
Operating Temperature	-40°C ~ 60°C : 1.5A full load
UL Temperature	-20°C~60°C
Storage Temperature	-40°C~85°C
Relative Humidity	5% ~ 90% non-condensing
Mounting	DIN rail

2.2.2. Interface Specification

Items	Specification
Input Specification	
Adapter Type	Slave node (PROFINET)
Protocol	PROFINET, Modbus RTU
Max. Expansion Module	32 slots
Max. Data Size	Max 1440 bytes
Max Length Bus Line	Up to 100m from Ethernet Hub/Switch with twisted CAT5 UTP/STP
Max. Nodes	Limited by PROFINET Specification.
Baud Rate	100Mbps, Auto-negotiation, Full duplex
Interface Connector	RJ-45 socket * 2pcs
IP-Address Setup	Via Master Device Software
Max Parameter Size	2048 Bytes (ex: 1 slot = 64 Byte + I/O Parameter Size (Dword size))
IAP Mode	When DIP Switch 1 to 8 setting is 254 or 255 (Using only Internet Explorer / recommended version 11)
Serial Port	RS232 for MODBUS/RTU, Touch panel
Serial Configuration (RS232)	Node : 1 (Fixed) Baud Rate : 115200 (Fixed) Data bit : 8 (Fixed) Parity bit : No parity (Fixed) Stop bit : 1 (Fixed)
Indicator	6 LEDs 1 Green/Red, Module Status (MOD) 1 Green, Physical Connection (NET) 1 Green/Red, Network Error(ERROR) 1 Green/Red, Expansion I/O Module Status (IOS) 1 Green, System Power Status 1 Green, Field Power Status 2 LEDs (each RJ45 Connector) 1 Yellow, Link/Active 1 Green, Not used
Module Location	Starter module left side of HX-RIO3 series system
Field Power Detection	About 14Vdc
General Specification	
Shock Operating	IEC 60068-2-27
Vibration Resistance	Based on IEC 60068-2-6
Industrial Emissions	EN 61000-6-4/A11 : 2011
Industrial Immunity	EN 61000-6-2 : 2005
Installation Position	Vertical and horizontal installation is available
Product Certifications	CE, UL, EAC

2.3. RIO3-PNA LED Indicator

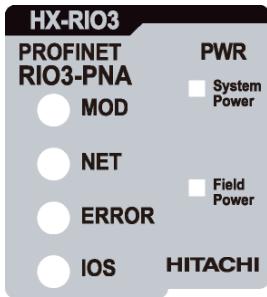

LED No.	LED Function / Description	LED Colour
MOD	Module Status	Green/Red
NET	Current communication status	Green
ERROR	Error Status (PROFINET)	Green
IOS	Extension Module Status	Green/Red
System Power	System Power Enable	Green
Field Power	Field Power Enable	Green

2.3.1. Module Status LED (MOD)

Status	LED	To indicate
No Powered	OFF	Not power is supplied to the unit.
Device Operational	Green	The unit is operating in normal condition.
Unrecoverable Fault	Red	The device has an unrecoverable fault. - Memory error or CPU watchdog error.

2.3.2. Network Status LED (NET)

Status	LED	To indicate
No Powered	OFF	No power is supplied to the unit.
Communication	Green	Normal communication
Communication Ready	Flashing Green	Communication identification
Invalid Configuration	Flashing Red	DCP Communication error(Invalid Configuration)

2.3.3. Error Status LED (ERROR)

Status	LED	To indicate
No Error	OFF	No Error.
Connection error	Red	Communication connection error.

2.3.4. Extension Module Status LED (IOS)

Status	LED	To indicate
Not Powered	OFF	Device may not be powered.
No Expansion Module	Flashing Red	Adapter has no expansion module
Internal Bus Connection, Run Exchanging I/O	Green	Exchanging I/O data.
Expansion Configuration Failed	Red	One or more expansion module occurred in fault state. <ul style="list-style-type: none"> - Detected invalid expansion module ID. - Overflowed Input/Output Size - Too many expansion module - Initialization failure - Communication failure. - Changed expansion module configuration. - Mismatch vendor code between adapter and expansion module.


2.3.5. Field-, System Power Status (Field Power, System Power LED)

Status	LED	To indicate
No field, System power	OFF	Not supplied 24Vdc system power.
Supplied field, System power	Green	Supplied 24Vdc field power

3. Dimension

3.1. RIO3-PNA

(mm)

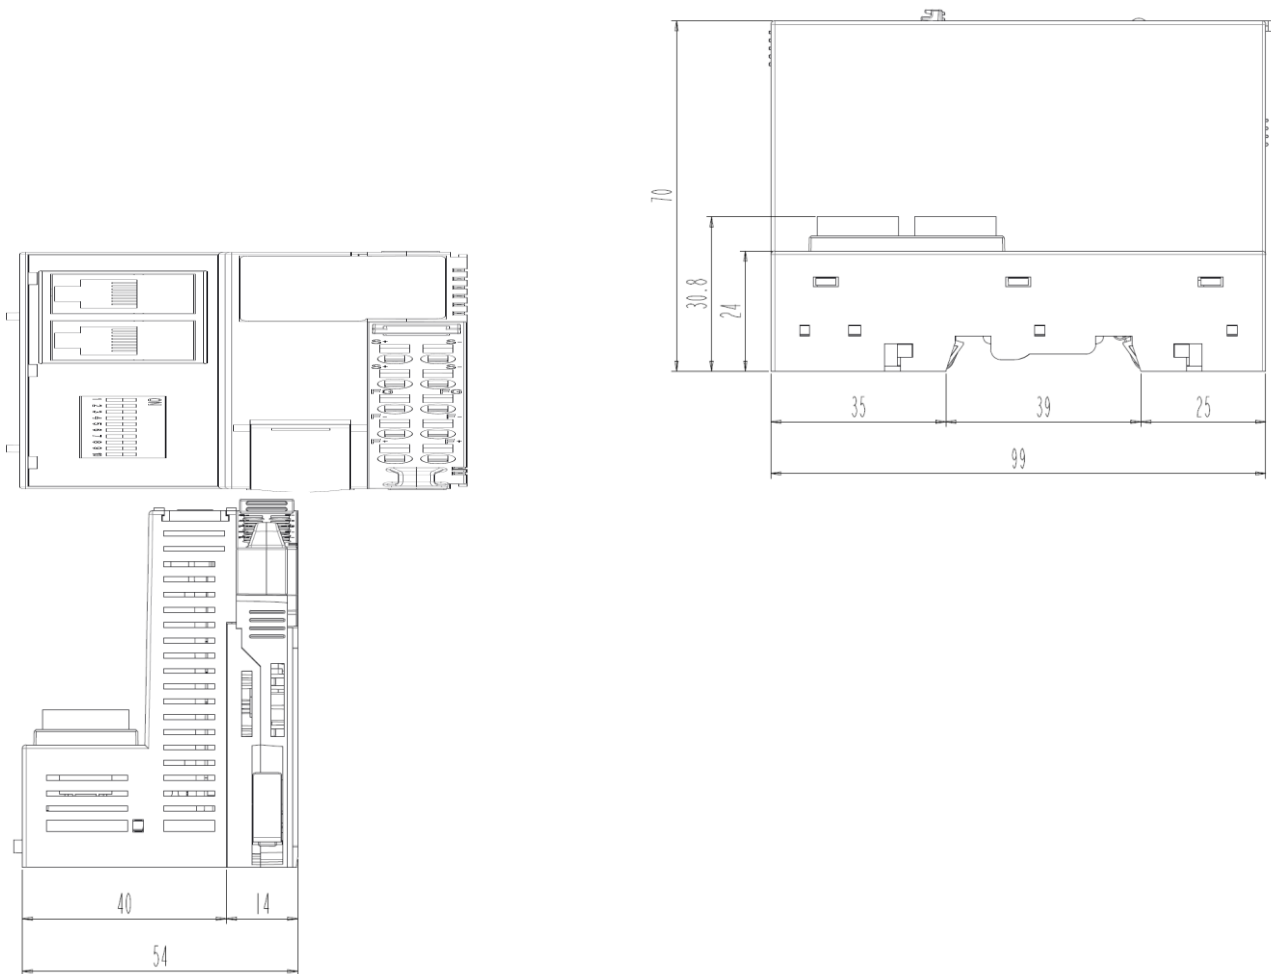

4. Mechanical Set Up

4.1 Total Expansion

The number of the module assembly that can be connected is 32. Maximum length is 438mm including RIO3-PNA.

4.2. Plugging and Removal of the Components.



As above figure to safeguard the HX-RIO3 module from jamming, it should be fixed onto the DIN rail with locking level. To do so, fold on the upper of the locking lever. To pull out the HX-RIO3 module, unfold the locking lever as below figure.

DANGER




Before work is done on the components, the voltage supply must be turned off.


4.3. Module mounting

How to mount on DIN-rail

- ① Press down the module lightly on the DIN-rail
※ DIN-rail lockers and lever should be unlocked in this step.

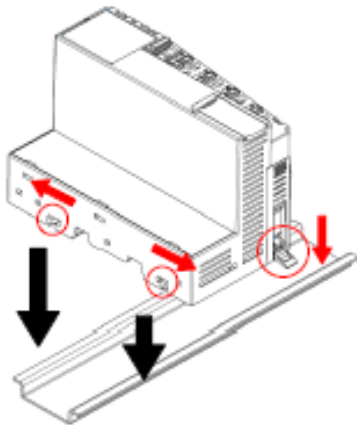


- ② Lock DIN-rail lockers and lever in right direction

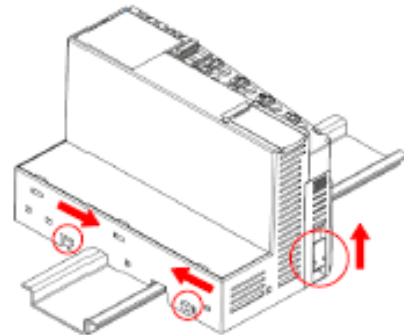


How to dismount from DIN-rail


- ① Unlock DIN-rail lockers and lever in right direction

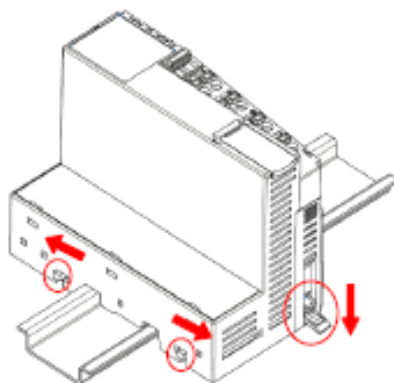

- ② Pull up the module to remove from the DIN-rail

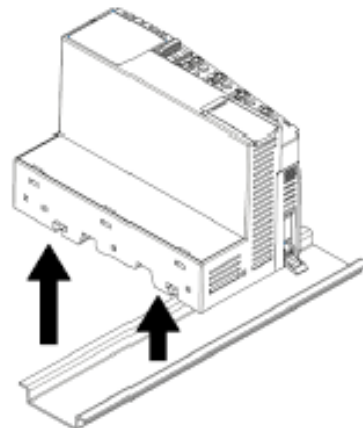

4.4. How to supply the power correctly

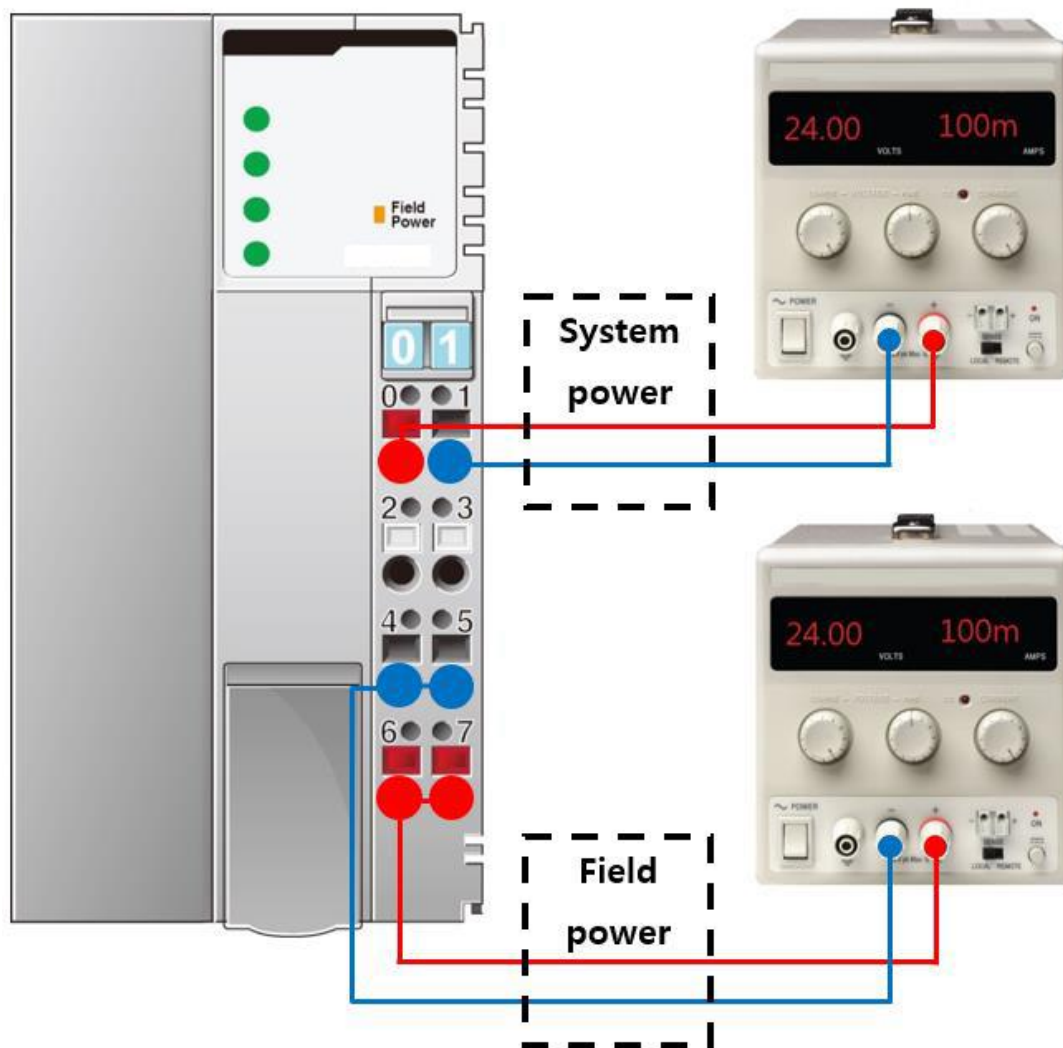

- Refer the pin map of power RTB before wiring.
- Current capacity margin should be considered when you supply the power.
- Supply voltage 24Vdc which is recommended voltage level.
- System and Field power must be supplied separately as the picture above.
- If the power is supplied to each System and Field power from same power source, it would be vulnerable to power noise.


5. Convenience Function

5.1. IAP Functionality


After setting up the dip switch as 254 or 255, Power off and on to start the IAP mode.

(254=Fixed IP Address (192.168.0.100) / 255=Last used IP Address). After Login the Web Browser connecting. (User ID: **Hitachi**, Password : **Hitachi**)

(1) Login into the IAP

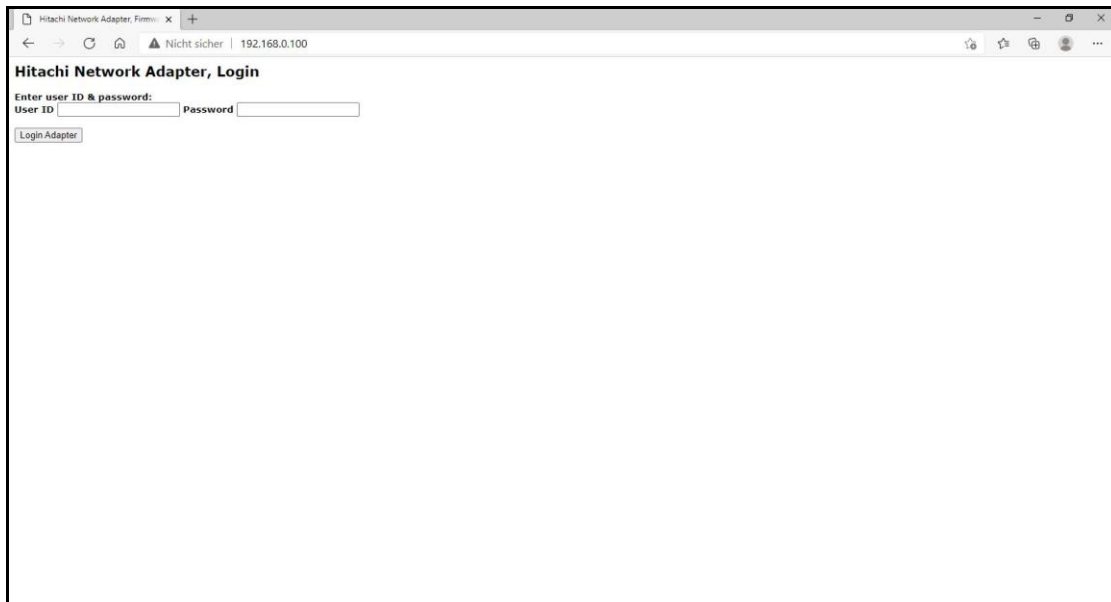

(2) Select the Update file

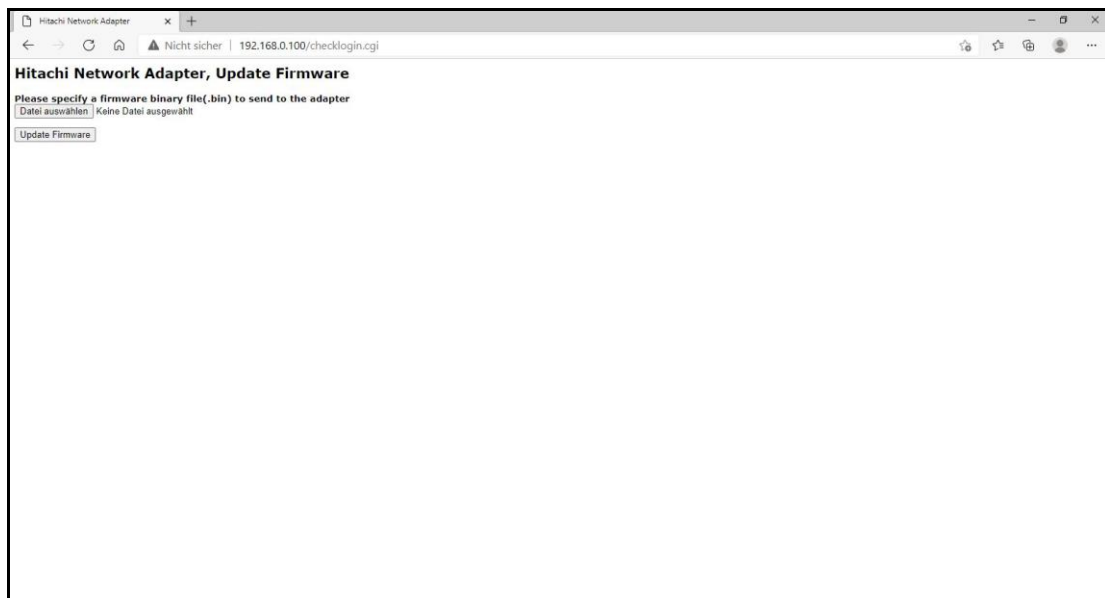


(3) Update the device

(4) After updating. Reboot the network adapter

6. RIO3-PNA Communication Interface


6.1. RJ-45 Socket

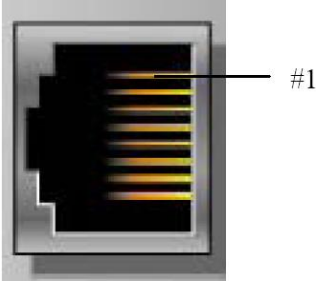

Shielded RJ-45 Socket

RJ-45	Signal Name	Description
1	TD+	Transmit +
2	TD-	Transmit -
3	RD+	Receive +
4		
5		
6	RD-	Receive -
7		
8		
Case	Shield	

6.2. Dip Switch

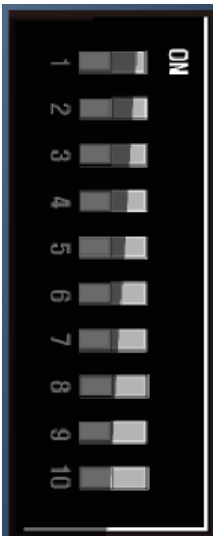

DIP Pole#	Description	
1	Node ID Bit0	Device Name (RIO3-PNA-XX) - XX must a value between 01~99
2	Node ID Bit1	
3	Node ID Bit2	
4	Node ID Bit3	
5	Node ID Bit4	
6	Node ID Bit5	
7	Node ID Bit6	
8	Reserve	
9	Reserve	
10	Node ID : Flash Memory Value	

- **When the dip switch is not set to non-zero(01~99):**

If the decimal value of the dip switch is not zero (0), the name of device will be fixed as "RIO3-PNA-xx"(xx:01~99). You must put the fixed device name.


- **When the dip switch "10 pole" is set to switch ON:**

RIO3-PNA Devices on a PROFINET subnet must have unique names. The device names must satisfy DNS naming conventions. This means that the following rules must be observed:

- Names are limited to a total of 127 characters (letters, numbers, dashes, or dots)

- Any component part (that is, a character string between two dots) of the device name may only be up to 63 characters long.
- Names cannot contain any special characters such as an umlauts, parentheses, underscores, forward or backward slashes, empty spaces, etc. The dash is the only special character allowed.
- Names must not begin or end with the “-” or “.” characters.
- Names must not have the format n.n.n.n (where n = 0...999).
- The device name must not start with numbers.
- If you want to change the IP address in non-volatile memory, please refer to Chapter3. (Editing Ethernet Nodes) Device names are assigned to PROFINET IO device when the device is being set up and placed in operation for the first time (“commissioned”).
- The default name is “RIO3-PNA-address”.


6.3. RS232 Port for MODBUS/RTU, Touch panel

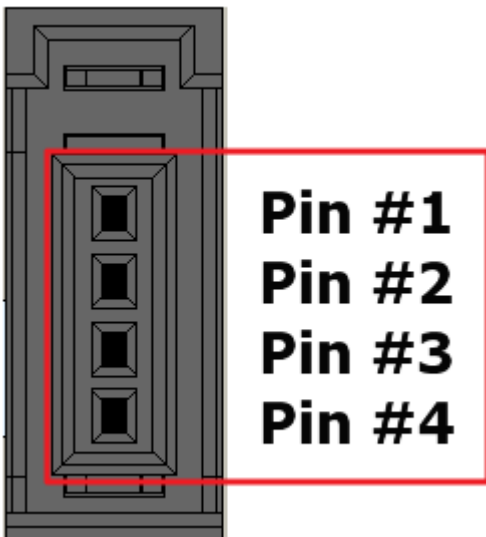

RS232 (37204-62A3-004PL/3M)		
Pin#	Signal Name	Description
1	Reserved	----
2	TXD	RS232 TXD
3	RXD	RS232 RXD
4	GND	RS232 GND

7. I/O Process Image Map

An expansion module may have 3 types of data as I/O data, configuration parameter and memory register. The data exchange between network adapter and expansion modules is done via an I/O process image data by HX-RIO3 series protocol. The following figure shows the data flow of process image between network adapter and expansion modules.

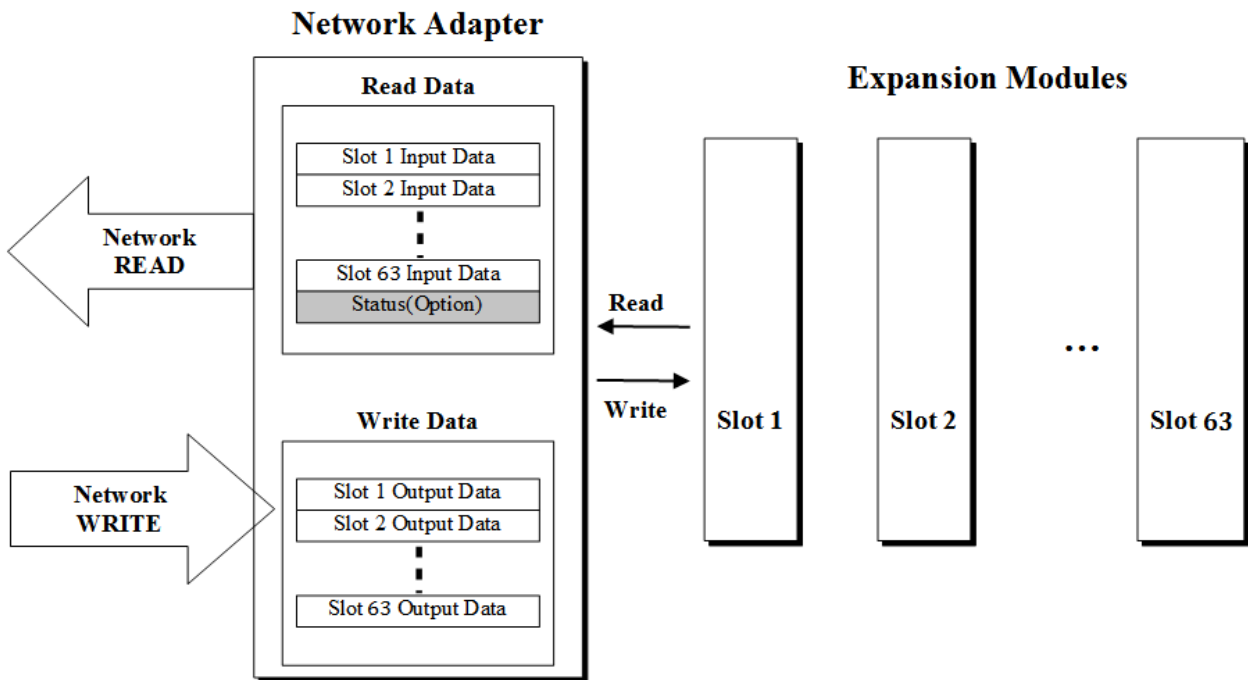

7.1. Mapping Data into Image Table

7.1.1. Discrete Input Module

- 4 Point Input Module

Input Module Data

D3	D2	D1	D0
----	----	----	----



Input Image Value

Bit No	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Byte 0	Reserved				D3	D2	D1	D0

- 8 Point Input Module

Input Module Data

D7	D6	D5	D4	D3	D2	D1	D0
----	----	----	----	----	----	----	----



Input Image Value

Bit No	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Byte 0	D7	D6	D5	D4	D3	D2	D1	D0

- 16 Point Input Module

Input Image Value

Bit No	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Byte 0	D7	D6	D5	D4	D3	D2	D1	D0

Input Module Data

D7	D6	D5	D4	D3	D2	D1	D0
D15	D14	D13	D12	D11	D10	D9	D8

- 32 Point Input Module

Input Module Data

D7	D6	D5	D4	D3	D2	D1	D0
D15	D14	D13	D12	D11	D10	D9	D8
D23	D22	D21	D20	D19	D18	D17	D16
D31	D30	D29	D28	D27	D26	D25	D24



Input Image Value

Bit No	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Byte 0	D7	D6	D5	D4	D3	D2	D1	D0
Byte 1	D15	D14	D13	D12	D11	D10	D9	D8
Byte 2	D23	D22	D21	D20	D19	D18	D17	D16
Byte 3	D31	D30	D29	D28	D27	D26	D25	D24

7.1.2. Discrete Output Module

● 4 Point Output Module

Output Image Value	Bit No	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Byte 0	Reserved				D3	D2	D1	D0	



Output Module Data	D3	D2	D1	D0
--------------------	----	----	----	----

● 8 Point Output Module

Output Image Value	Bit No	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Byte 0	D7	D6	D5	D4	D3	D2	D1	D0	



Output Module Data	D7	D6	D5	D4	D3	D2	D1	D0
--------------------	----	----	----	----	----	----	----	----

● 16 Point Output Module

Output Image Value	Bit No	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Byte 0	D7	D6	D5	D4	D3	D2	D1	D0	
Byte 1	D15	D14	D13	D12	D11	D10	D9	D8	



Output Module Data	D7	D6	D5	D4	D3	D2	D1	D0
	D15	D14	D13	D12	D11	D10	D9	D8

● 32 Point Output Module


Output Image Value	Bit No	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Byte 0	D7	D6	D5	D4	D3	D2	D1	D0	
Byte 1	D15	D14	D13	D12	D11	D10	D9	D8	
Byte 2	D23	D22	D21	D20	D19	D18	D17	D16	
Byte 3	D31	D30	D29	D28	D27	D26	D25	D24	




Output Module Data	D7	D6	D5	D4	D3	D2	D1	D0
	D15	D14	D13	D12	D11	D10	D9	D8
	D23	D22	D21	D20	D19	D18	D17	D16
	D31	D30	D29	D28	D27	D26	D25	D24

7.1.3. Analog Input Module

- 4 Channel Analog Input Module

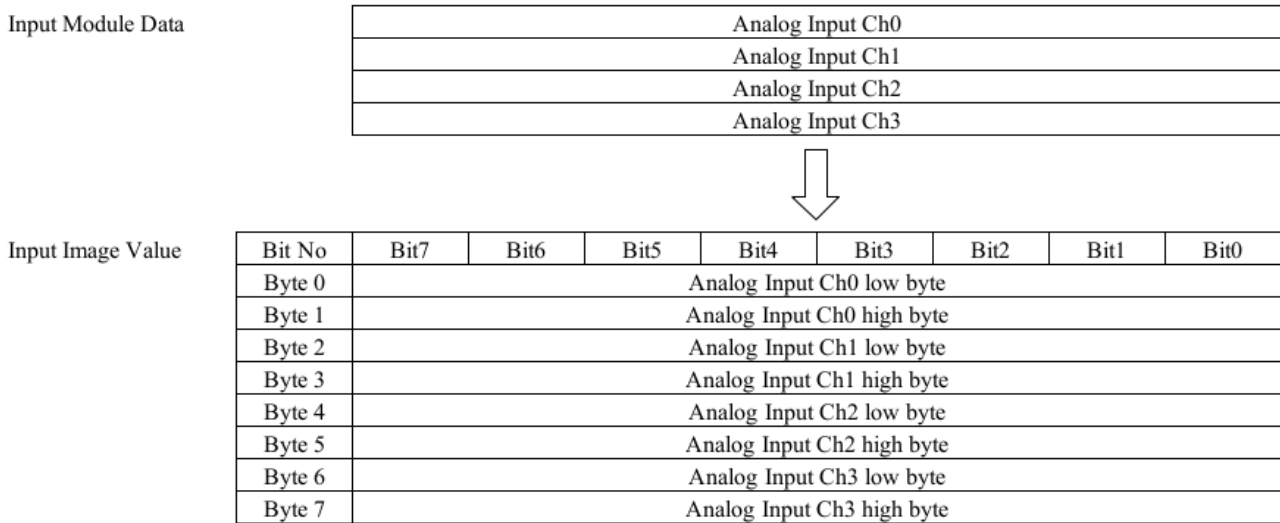

- 8 Channel Analog Input Module

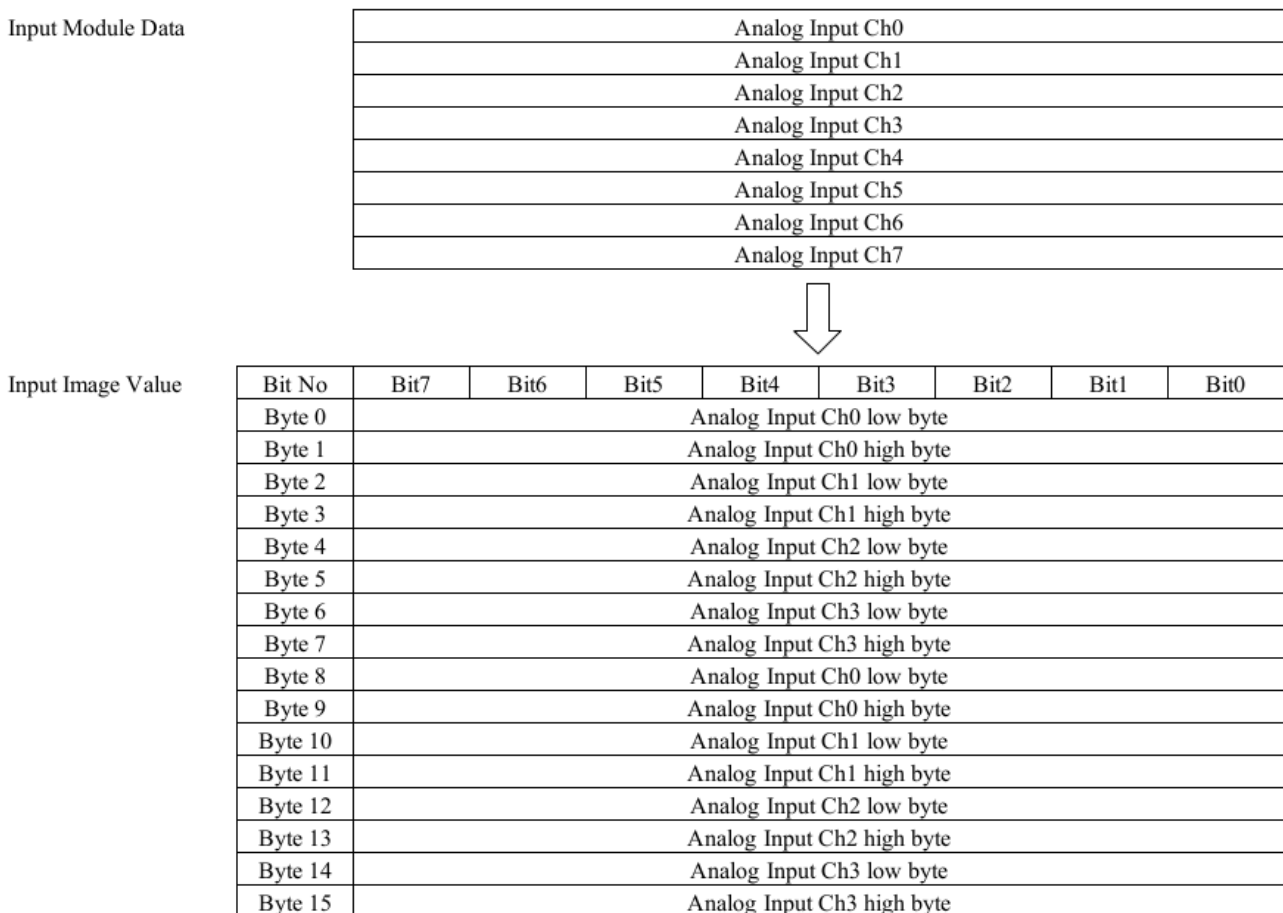

7.1.3. Analog Output Module

- 4 Channel Analog Output Module

Output Image Value	Bit No	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
	Byte 0	Analog Output Ch0 low byte							
	Byte 1	Analog Output Ch0 high byte							
	Byte 2	Analog Output Ch1 low byte							
	Byte 3	Analog Output Ch1 high byte							
	Byte 4	Analog Output Ch2 low byte							
	Byte 5	Analog Output Ch2 high byte							
	Byte 6	Analog Output Ch3 low byte							
	Byte 7	Analog Output Ch3 high byte							



Output Module Data	Analog Output Ch0
	Analog Output Ch1
	Analog Output Ch2
	Analog Output Ch3

- 8 Channel Analog Output Module

Output Image Value	Bit No	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
	Byte 0	Analog Output Ch0 low byte							
	Byte 1	Analog Output Ch0 high byte							
	Byte 2	Analog Output Ch1 low byte							
	Byte 3	Analog Output Ch1 high byte							
	Byte 4	Analog Output Ch2 low byte							
	Byte 5	Analog Output Ch2 high byte							
	Byte 6	Analog Output Ch3 low byte							
	Byte 7	Analog Output Ch3 high byte							
	Byte 8	Analog Output Ch4 low byte							
	Byte 9	Analog Output Ch4 high byte							
	Byte 10	Analog Output Ch5 low byte							
	Byte 11	Analog Output Ch5 high byte							
	Byte 12	Analog Output Ch6 low byte							
	Byte 13	Analog Output Ch6 high byte							
	Byte 14	Analog Output Ch7 low byte							
	Byte 15	Analog Output Ch7 high byte							




Output Module Data	Analog Output Ch0
	Analog Output Ch1
	Analog Output Ch2
	Analog Output Ch3
	Analog Output Ch4
	Analog Output Ch5
	Analog Output Ch6
	Analog Output Ch7

7.2. Example of Input Process Image (Input Register) Map

Input image data depends on slot position and expansion slot data type. Input process image data is only ordered by expansion slot position

* Example slot configuration

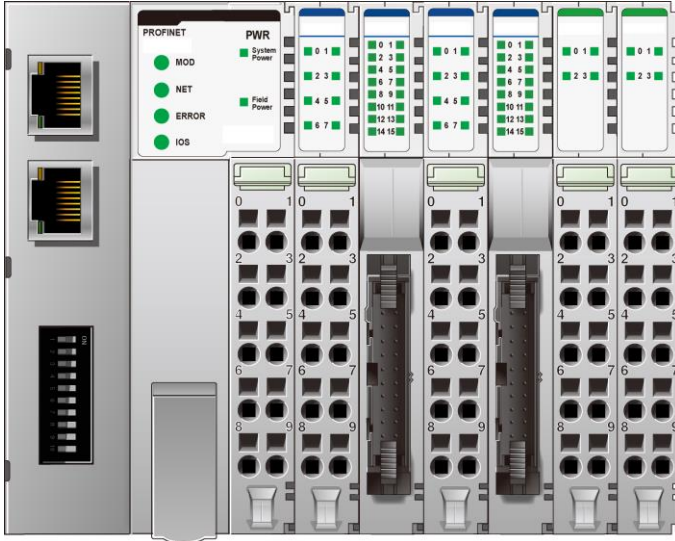

Slot No.	Module Description
#0	PROFINET Adapter
#1	8-discrete output
#2	16-discrete output
#3	8-discrete input
#4	16-discrete input
#5	4-analog input
#6	4-analog input


Input Process Image

Byte	Slot#	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Ready Byte 0	Slot 1	Discrete Input 8 Point							
Ready Byte 1	Slot 2	Discrete Input 16 Point low byte							
Ready Byte 2		Discrete Input 16 Point high byte							
Ready Byte 3	Slot 3	Discrete Input 8 Point							
Ready Byte 4	Slot 4	Discrete Input 16 Point low byte							
Ready Byte 5		Discrete Input 16 Point high byte							
Ready Byte 6	Slot 5	Analog Input Ch0 low byte							
Ready Byte 7		Analog Input Ch0 high byte							
Ready Byte 8		Analog Input Ch1 low byte							
Ready Byte 9		Analog Input Ch1 high byte							
Ready Byte 10		Analog Input Ch2 low byte							
Ready Byte 11		Analog Input Ch2 high byte							
Ready Byte 12		Analog Input Ch3 low byte							
Ready Byte 13		Analog Input Ch3 high byte							
Ready Byte 14	Slot 6	Analog Input Ch0 low byte							
Ready Byte 15		Analog Input Ch0 high byte							
Ready Byte 16		Analog Input Ch1 low byte							
Ready Byte 17		Analog Input Ch1 high byte							
Ready Byte 18		Analog Input Ch2 low byte							
Ready Byte 19		Analog Input Ch2 high byte							
Ready Byte 20		Analog Input Ch3 low byte							
Ready Byte 21		Analog Input Ch3 high byte							

7.3. Example of Output Process Image (Output Register) Map

Output image data depends on slot position and expansion slot data type. Output process image data is only ordered by expansion slot position.

*** Example slot configuration**

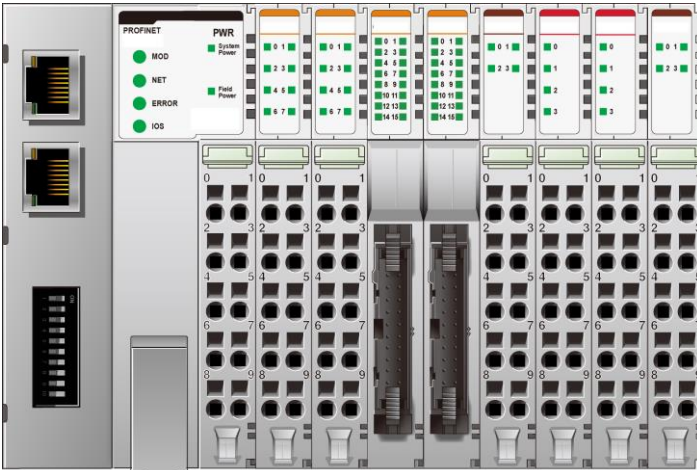

Slot No.	Module Description
#0	PROFINET Adapter
#1	8-discrete output
#2	8-discrete output
#3	16-discrete output
#4	16-discrete output
#5	4-analog output
#6	4-relay output
#7	4-relay output
#8	4-analog output

Output Process Image

Byte	Slot#	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Write Byte 0	Slot 1	Discrete Output 8 Point							
Write Byte 1	Slot 2	Discrete Output 8 Point							
Write Byte 2	Slot 3	Discrete Output 16 Point low byte							
Write Byte 3		Discrete Output 16 Point high byte							
Write Byte 4	Slot 4	Discrete Output 16 Point low byte							
Write Byte 5		Discrete Output 16 Point high byte							
Write Byte 6	Slot 5	Analog Output Ch0 low byte							
Write Byte 7		Analog Output Ch0 high byte							
Write Byte 8		Analog Output Ch1 low byte							
Write Byte 9		Analog Output Ch1 high byte							
Write Byte 10		Analog Output Ch2 low byte							
Write Byte 11		Analog Output Ch2 high byte							
Write Byte 12		Analog Output Ch3 low byte							
Write Byte 13		Analog Output Ch3 high byte							
Write Byte 14	Slot 6	Not used				Discrete Output 4 Point			
Write Byte 15	Slot 7	Not used				Discrete Output 4 Point			
Write Byte 16	Slot 8	Analog Output Ch0 low byte							
Write Byte 17		Analog Output Ch0 high byte							
Write Byte 18		Analog Output Ch1 low byte							
Write Byte 19		Analog Output Ch1 high byte							
Write Byte 20		Analog Output Ch2 low byte							
Write Byte 21		Analog Output Ch2 high byte							
Write Byte 22		Analog Output Ch3 low byte							
Write Byte 23		Analog Output Ch3 high byte							

7.4. MODBUS Special Register Map

The special register map can be accessed by function code 3, 4, 6 and 16. Also the special register map must be accessed by read/write of each address (one address).

7.4.1. Adapter Identification Special Register (0x1000, 4096)

Address	Access	Type, Size	Description
0x1000(4096)	Read	1word	Vendor ID = 0x0140(320), HITACHI
0x1001(4097)	Read	1word	Device type = 0x000C, Network Adapter
0x1002(4098)	Read	1word	Product Code = 0x9070
0x1003(4099)	Read	1word	Firmware revision, if 0x0101, revision 1.01
0x1004(4100)	Read	2word	Product unique serial number
0x1005(4101)	Read	String Up to 34byte	Product name string (ASCII) "RIO3-PNA,PROFINET,GBUS"
0x1006(4102)	Read	1word	Sum check of EEPROM
0x1010(4112)	Read	2word	Firmware release date
0x1011(4113)	Read	2word	Product manufacturing inspection date
0x101E(4126)	Read	7word - 1word - 1word - 1word - 1word - 1word - 2word	Composite Id of following address * RTU mode 0x1100(4352), Modbus RS232 Node. (Fixed 0x0001) 0x1000(4096), Vendor ID 0x1001(4097), Device type 0x1002(4098), Product code 0x1003(4099), Firmware revision 0x1004(4100), Product serial number

- String Type consists of valid string length (first 1word) and array of characters

7.4.2. Other Time Special Register (0x1028, 4136)

Address	Access	Type, Size	Description
0x1028(4136)	Read	1word	IO update time, main loop time. (1 μ sec unit)

7.4.3. Adapter IP/MAC Address Special Register (0x1050, 4176)

Address	Access	Type, Size	Description
0x1050(4176)	Read/Write	2word	IP address. If 192.168.123.1, then 0xA8C0, 0x017B. After updating this value, IP address, Subnet mask and Gateway are applied as new one.
0x1051(4177)	Read/Write	2word	Subnet mask. If 255.255.255.0, then 0xFFFF, 0x00FF.
0x1052(4178)	Read/Write	2word	Gateway. If 192.168.123.254, then 0xA8C0, 0xFE7B
0x1053(4179)	Read	3word	Ethernet physical address (MAC-ID). If 11-22-33-44-55-66, then 0x2211, 0x4433, 0x6655.

7.4.4. Adapter Information Special Register (0x1100, 4352)

Address	Access	Type, Size	Description																					
0x1100(4352)*	Read	1word	Current STATION-NUMBER. If Dip SW 10 = Off																					
0x1102(4354)	Read	1word	Start address of input image word register. =0x0000																					
0x1103(4355)	Read	1word	Start address of output image word register. =0x0800																					
0x1104(4356)	Read	1word	Size of input image word register.																					
0x1105(4357)	Read	1word	Size of output image word register.																					
0x1106(4358)	Read	1word	Start address of input image bit. = 0x0000																					
0x1107(4359)	Read	1word	Start address of output image bit. =0x1000																					
0x1108(4360)	Read	1word	Size of input image bit.																					
0x1109(4361)	Read	1word	Size of output image bit.																					
0x110A(4362)	Read	1word	Update time for cyclic data change (same as 0x1028)																					
0x110D(4365)	Read	1word	Current Dip Switch State and Field Power Status (MSB) ex) Flash memory Value using, Dip SW(0x01), Field Power On = 0x8201																					
0x110E(4366)	Read	Up to 33word	Expansion slot's RIO3-number including RIO3 First 1word is adapter's number, if RIO3-PNA, then 0x9287																					
0x1110(4368)	Read	1word	Number of expansion slot																					
0x1113(4371)	Read	Up to 33word	Expansion slot Module Id. First 1word is adapter's module id.																					
0x1119(4377)	Read	1word	Hi byte is Modbus status; low byte is internal bus status. Zero value means 'no error'.																					
			<table border="1"> <thead> <tr> <th>Modbus status</th> <th>Internal bus status(G-Bus)</th> </tr> </thead> <tbody> <tr> <td></td> <td>0x00 : OPERATING</td> </tr> <tr> <td></td> <td>0x01 : COMMUNICATION_FAULT</td> </tr> <tr> <td></td> <td>0x02 : CONNECT_FAULT</td> </tr> <tr> <td></td> <td>0x03 : CONFIG_FAULT</td> </tr> <tr> <td></td> <td>0x04 : NO_EXPANSION</td> </tr> <tr> <td></td> <td>0x05 : INVALID_ATTR_VALUE</td> </tr> <tr> <td></td> <td>0x06 : TOO_MUCH_DATA</td> </tr> <tr> <td></td> <td>0x07 : VENDOR_ERROR</td> </tr> <tr> <td></td> <td>0x08 : NOT_EXPECTED_SLOT</td> </tr> <tr> <td></td> <td>0x09 : CRC_ERROR</td> </tr> <tr> <td></td> <td>0x80 : NO FIELD POWER</td> </tr> </tbody> </table>	Modbus status	Internal bus status(G-Bus)		0x00 : OPERATING		0x01 : COMMUNICATION_FAULT		0x02 : CONNECT_FAULT		0x03 : CONFIG_FAULT		0x04 : NO_EXPANSION		0x05 : INVALID_ATTR_VALUE		0x06 : TOO_MUCH_DATA		0x07 : VENDOR_ERROR		0x08 : NOT_EXPECTED_SLOT	
Modbus status	Internal bus status(G-Bus)																							
	0x00 : OPERATING																							
	0x01 : COMMUNICATION_FAULT																							
	0x02 : CONNECT_FAULT																							
	0x03 : CONFIG_FAULT																							
	0x04 : NO_EXPANSION																							
	0x05 : INVALID_ATTR_VALUE																							
	0x06 : TOO_MUCH_DATA																							
	0x07 : VENDOR_ERROR																							
	0x08 : NOT_EXPECTED_SLOT																							
	0x09 : CRC_ERROR																							
	0x80 : NO FIELD POWER																							
0x111D(4381)	Read	1word	Adapter HX-RIO3 series Revision.																					

* After the system is reset, the new "Set Value" action is applied.

** If the slot location is changed, set default value automatically (all expansion slot are live)

7.4.5. Expansion Slot Information Special Register (0x2000, 8192)

Each expansion slot has 0x20(32) address offset and same information structure.

Slot#1 0x2000(8192) ~ 0x201F(8223)	Slot#2 0x2020(8224) ~ 0x203F(8255)
Slot#3 0x2040(8256) ~ 0x205F(8287)	Slot#4 0x2060(8288) ~ 0x207F(8319)
Slot#5 0x2080(8320) ~ 0x209F(8351)	Slot#6 0x20A0(8352) ~ 0x20BF(8383)
Slot#7 0x20C0(8384) ~ 0x20DF(8415)	Slot#8 0x20E0(8416) ~ 0x20FF(8447)
Slot#9 0x2100(8448) ~ 0x211F(8479)	Slot#10 0x2120(8480) ~ 0x213F(8511)
Slot#11 0x2140(8512) ~ 0x215F(8543)	Slot#12 0x2160(8544) ~ 0x217F(8575)
Slot#13 0x2180(8576) ~ 0x219F(8607)	Slot#14 0x21A0(8608) ~ 0x21BF(8639)

.....

Slot#32 0x23E0(9184)~0x23FF(9215)

Address Offset	Expansion Slot#1	Expansion Slot#2	Expansion Slot#3	Expansion Slot#4	Expansion Slot#63
+ 0x00(+0)	0x2000(8192)	0x2020(8224)	0x2040(8256)	0x2060(8288)	0x27C0(10176)
+ 0x01(+1)	0x2001(8193)	0x2021(8225)	0x2041(8257)	0x2061(8289)	0x27C1(10177)
+ 0x02(+2)	0x2002(8194)	0x2022(8226)	0x2042(8258)	0x2062(8290)	0x27C2(10178)
+ 0x03(+3)	0x2003(8195)	0x2023(8227)	0x2043(8259)	0x2063(8291)	0x27C3(10179)
+ 0x04(+4)	0x2004(8196)	0x2024(8228)	0x2044(8260)	0x2064(8292)	0x27C4(10180)
+ 0x05(+5)	0x2005(8197)	0x2025(8229)	0x2045(8261)	0x2065(8293)	0x27C5(10181)
+ 0x06(+6)	0x2006(8198)	0x2026(8230)	0x2046(8262)	0x2066(8294)	0x27C6(10182)
+ 0x07(+7)	0x2007(8199)	0x2027(8231)	0x2047(8263)	0x2067(8295)	0x27C7(10183)
+ 0x08(+8)	0x2008(8200)	0x2028(8232)	0x2048(8264)	0x2068(8296)	0x27C8(10184)
+ 0x09(+9)	0x2009(8201)	0x2029(8233)	0x2049(8265)	0x2069(8297)	0x27C9(10185)
+ 0x0A(+10)	0x200A(8202)	0x202A(8234)	0x204A(8266)	0x206A(8298)	0x27CA(10186)
+ 0x0B(+11)	0x200B(8203)	0x202B(8235)	0x204B(8267)	0x206B(8299)	0x27CB(10187)
+ 0x0C(+12)	0x200C(8204)	0x202C(8236)	0x204C(8268)	0x206C(8300)	0x27CC(10188)
+ 0x0D(+13)	0x200D(8205)	0x202D(8237)	0x204D(8269)	0x206D(8301)	0x27CD(10189)
+ 0x0E(+14)	0x200E(8206)	0x202E(8238)	0x204E(8270)	0x206E(8302)	0x27CE(10190)
+ 0x0F(+15)	0x200F(8207)	0x202F(8239)	0x204F(8271)	0x206F(8303)	0x27CF(10191)
+ 0x10(+16)	0x2010(8208)	0x2030(8240)	0x2050(8272)	0x2070(8304)	0x27D0(10192)
+ 0x11(+17)	0x2011(8209)	0x2031(8241)	0x2051(8273)	0x2071(8305)	0x27D1(10193)
+ 0x12(+18)	0x2012(8210)	0x2032(8242)	0x2052(8274)	0x2072(8306)	0x27D2(10194)
+ 0x13(+19)	0x2013(8211)	0x2033(8243)	0x2053(8275)	0x2073(8307)	0x27D3(10195)

⁺ 0x14(+20)	0x2014(8212)	0x2034(8244)	0x2054(8276)	0x2074(8308)	0x27D4(10196)
⁺ 0x15(+21)	0x2015(8213)	0x2035(8245)	0x2055(8277)	0x2075(8309)	0x27D5(10197)
⁺ 0x16(+22)	0x2016(8214)	0x2036(8246)	0x2056(8278)	0x2076(8310)	0x27D6(10198)
⁺ 0x17(+23)	0x2017(8215)	0x2037(8247)	0x2057(8279)	0x2077(8311)	0x27D7(10199)
⁺ 0x18(+24)	0x2018(8216)	0x2038(8248)	0x2058(8280)	0x2078(8312)	0x27D8(10200)
⁺ 0x19(+25)	0x2018(8217)	0x2038(8249)	0x2058(8281)	0x2078(8313)	0x27D9(10201)
⁺ 0x1A(+26)	0x201A(8218)	0x203A(8250)	0x205A(8282)	0x207A(8314)	0x27DA(10202)
⁺ 0x1B(+27)	0x201B(8219)	0x203B(8251)	0x205B(8283)	0x207B(8315)	0x27DB(10203)
⁺ 0x1C(+28)	0x201C(8220)	0x203C(8252)	0x205C(8284)	0x207C(8316)	0x27DC(10204)
⁺ 0x1D(+29)	0x201D(8221)	0x203D(8253)	0x205D(8285)	0x207D(8317)	0x27DD(10205)
⁺ 0x1E(+30)	0x201E(8222)	0x203E(8254)	0x205E(8286)	0x207E(8318)	0x27DE(10206)
⁺ 0x1F(+31)	0x201F(8223)	0x203F(8255)	0x205F(8287)	0x207F(8319)	0x27DF(10207)

Address Offset	Access	Type, Size	Description
+ 0x02(+2) **	Read	1word	Input start register address of input image word this slot.
+ 0x03(+3) **	Read	1word	Input word's bit offset of input image word this slot.
+ 0x04(+4) **	Read	1word	Output start register address of output image word this slot.
+ 0x05(+5) **	Read	1word	Output word's bit offset of output image word this slot.
+ 0x06(+6) **	Read	1word	Input bit start address of input image bit this slot.
+ 0x07(+7) **	Read	1word	Output bit start address of output image bit this slot.
+ 0x08(+8) **	Read	1word	Size of input bit this slot
+ 0x09(+9) **	Read	1word	Size of output bit this slot
+ 0x0A(+10)**	Read	n word	Read input data this slot
+ 0x0B(+11)**	Read/Write	n word	Read/write output data this slot
+ 0x0E(+14)	Read	1word	RIO3-number
+ 0x0F(+15)	Read	String Up to 72byte	First 1word is length of valid character string. If GT-1238, returns "00 1E 52 54 2D 31 32 33 38 2C 20 38 44 49 2C 20 32 34 56 64 63 2C 20 55 6E 69 76 65 72 73 61 6C 00 00" Valid character size = 0x001E =30 characters, "GT-1238, 8DI, 24Vdc, Universal"
+ 0x10(+16)	Read	1word	Size of configuration parameter byte
+ 0x11(+17)**	Read/Write	n word	Read/write Configuration parameter data, Refer to each IO parameter Specification.
+ 0x17(+23)	Read	2word	Firmware Revision ex) 0x00010010 (Major revision 1 /Minor revision 1, Rev 1.001)
+ 0x19(+25)	Read	2word	Firmware release date.

* After the system is reset, the new "Set Value" action is applied.

8. Parameter

8.1. RIO3-PNA Parameter

Parameter	Setting	Description
Word data type	All type	Little Endian format(LSB-MSB)
Stop action	Clear output image to 0 *	All outputs are set to 0.
	Hold last valid output image	All outputs are remaining the last value.
Stop action Mode	General Mode*	For SIEMENS PLC
	Special Mode	For Soft PLC (ex-CoDeSys)

* : Default setting

8.2. RIO3-PNA PROFINET IO Characteristics

8.2.1. Device Identity

Item	Value
Vendor	HITACHI
Vendor ID	0x0140
Product family	HITACHI HX-RIO3 System
Device ID	0x9A00
Details	RIO3-PNA PROFINET IO Device

8.2.2. Device Access Point

Item	Value
Module Ident Number	0x00009A00
Details	RIO3-PNA PROFINET IO Device
Vendor Name	HITACHI
Order Number	RIO3-PNA
Category	HITACHI PROFINET I/O
Software Version	V1.0
Hardware Version	V1.0
Maximal Input Length	1440 Bytes
Maximal Output Length	1440 Bytes
Physical Slots	0..32
Minimal Device Interval	4msec
Based on	port Stack
DNS Compliant Name	RIO3-PNA-xx
Supports Extended Assignment of IP Address	No
Fixed in Slots	0
Instance Field of the Object UUID	1
Supports Multiple Write	Yes
Requires IOPS/IOCS	Yes
Requires Engineering tool which supports at least GSDML Version	V2.32


Item	Value
Sub-slot Number	Sub-slot Label
32768(0x8000)	X1
32769(0x8001)	P1

Sub-module								
Sub-module Ident Number	0x00000001							
RIO3-PNAParameters (Index : 1, Length : 2Bytes, Transfer sequence : 0)								
Byte Offset	Data							
0	0x00, 0x00							
Name of Parameter	Data Type	Byte Offset	Bit Offset	Bit Length	Default Value	Value Range	Changeable	Visible
Word data format	Bit Area	0	0	1	MOTOROLA	0..1	Yes	Yes
Stop action	Bit Area	1	0	1	Clear output images to 0	0..1	Yes	Yes
Interface : RIO3-PNA								
Sub-module Ident Number					0x0002			
Sub-slot Number					32768 (0x8000)			
Supports Real time Class					Class 1			
Supports Isochronous Mode					No			
Number of Additional Input CRs					0			
Number of Additional Output CRs					0			
Number of Additional Multicast Provider CRs					0			
Number of Multicast Consumer CRs					0			
Supported Send-clock Factors (Base 31.25us)					32 64 128			
Supported Reduction Ratios					1 2 4 8 16 32 64 128 256 512			
Port 1 : Port 1								
Sub-module Ident Number					0x0003			
Sub-slot Number					32769 (0x8001)			
MAU Type					100BASETXFD			


9. TIA Portal V14

9.1. Import GSDML file

(1) Option → Manage general station description files (GSD)


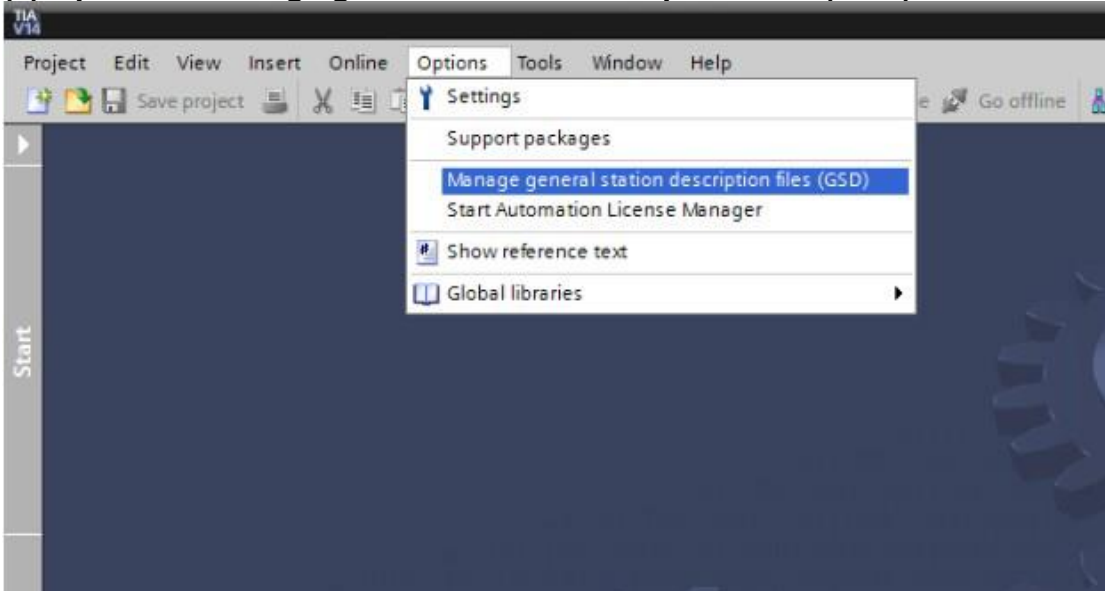


(2) Check GSDML file → Install

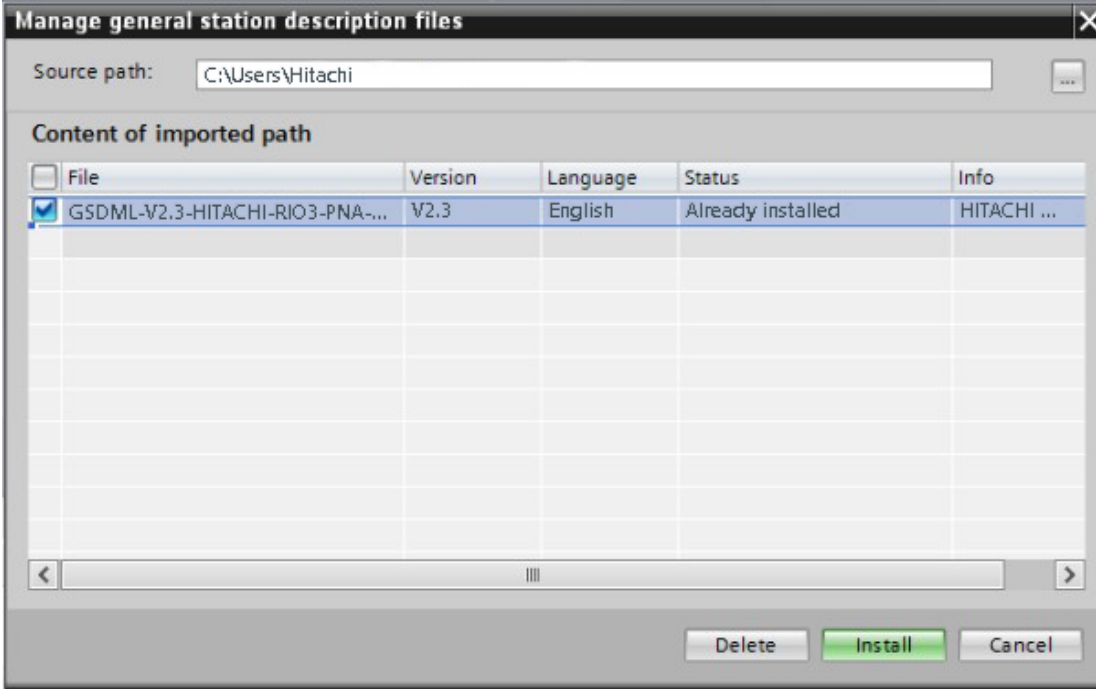


9.2. Hardware configuration setting


(1) Add new device

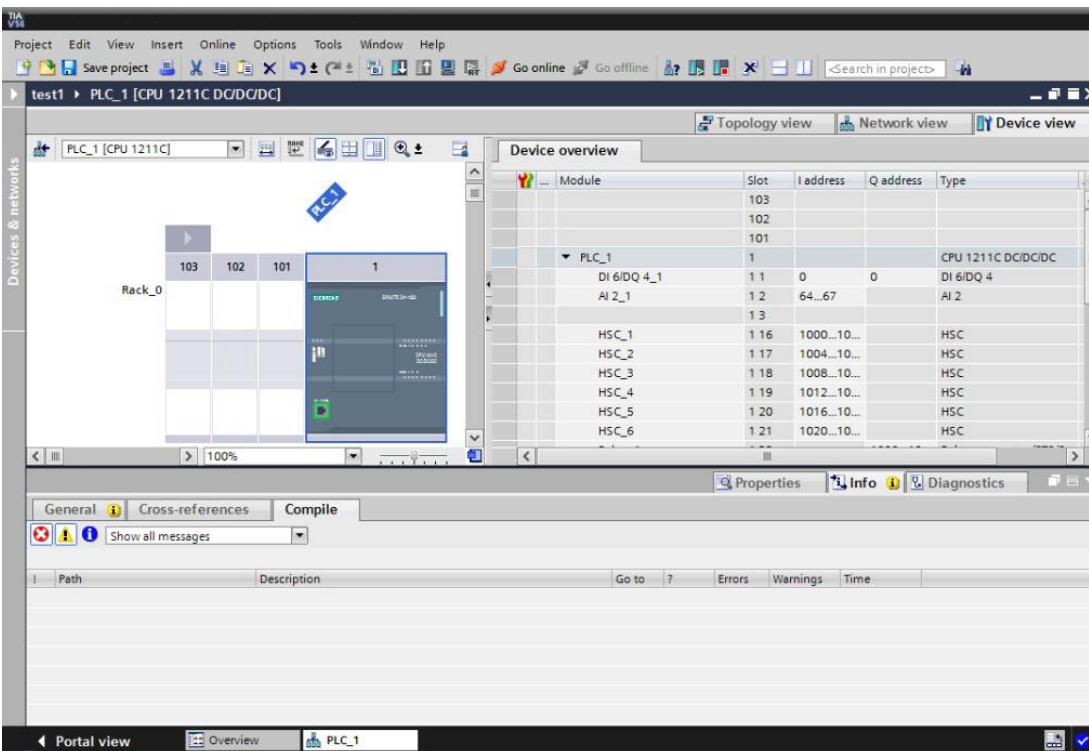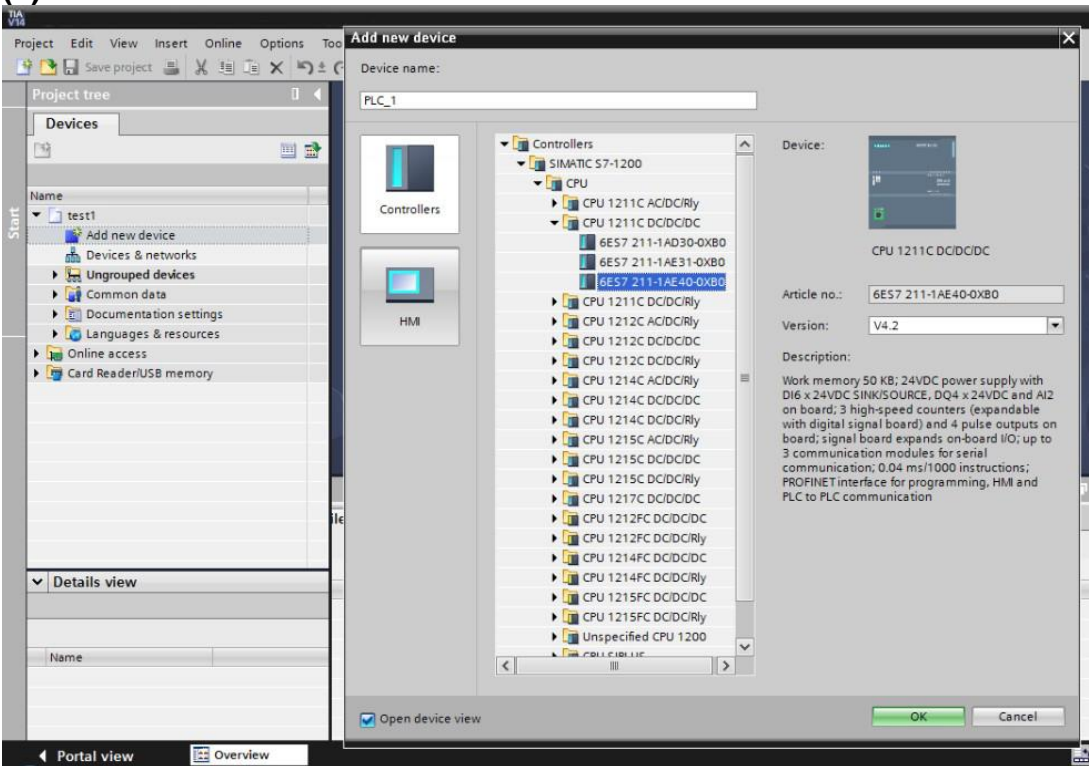


(2) Network view → Add RIO3-PNA → Connect

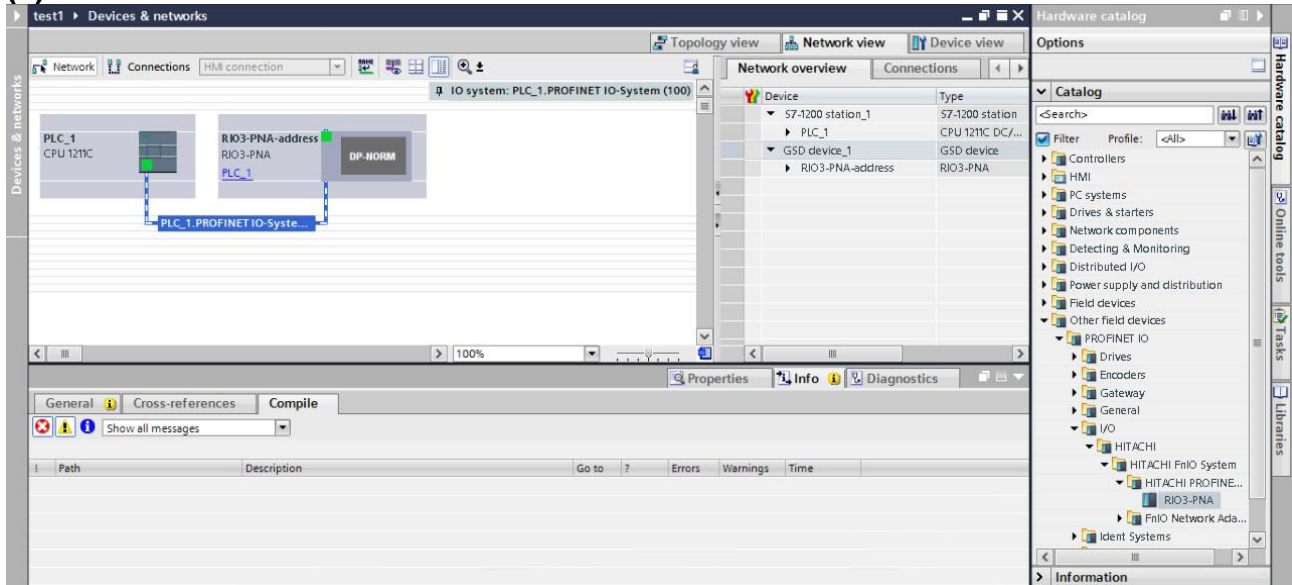

(3) Change module name → Add I/O modules → Check IEC V2.2 LLDP

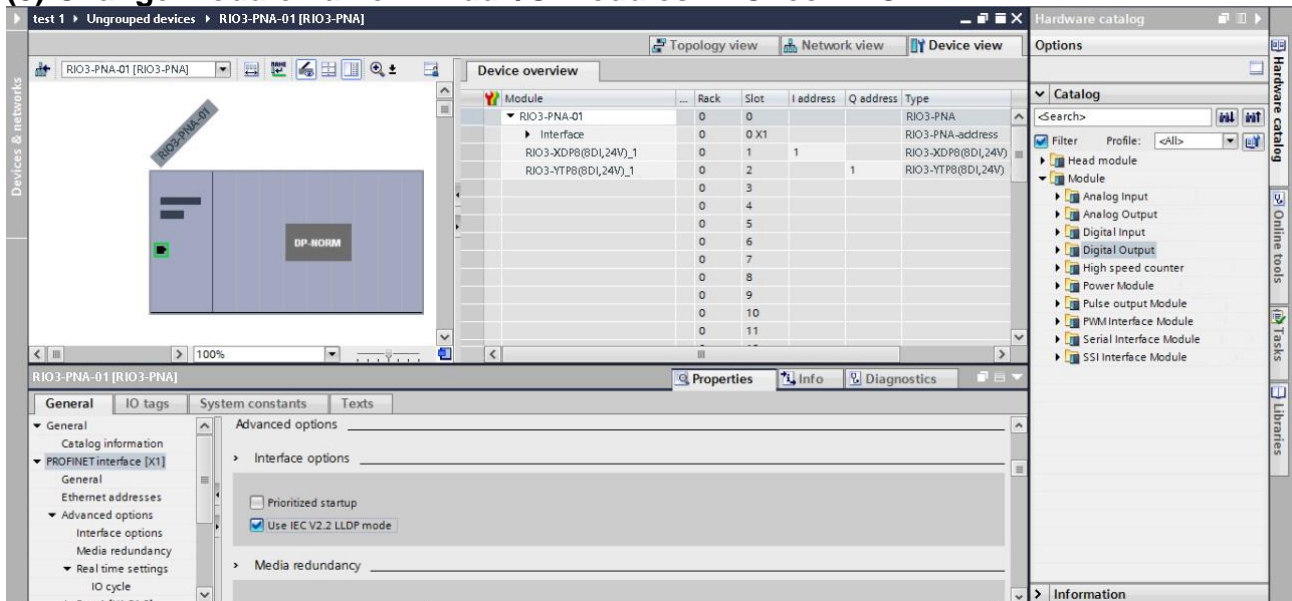


(4) Download to device

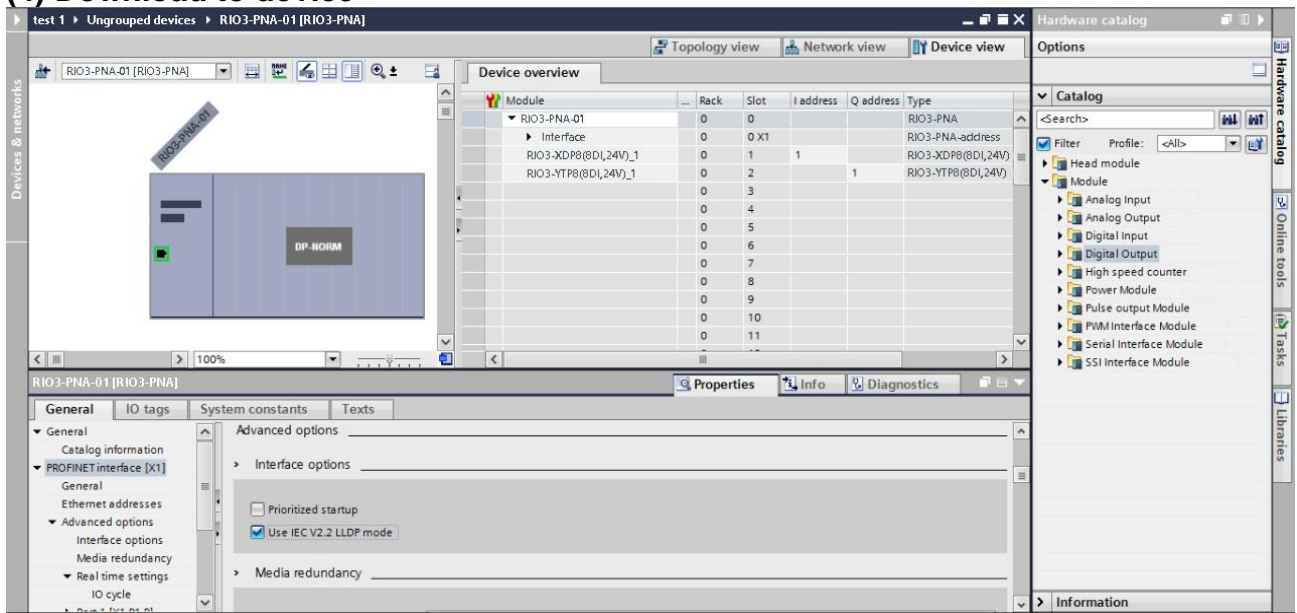


9.3. I/O test


(1) Watch and force tables → Force table

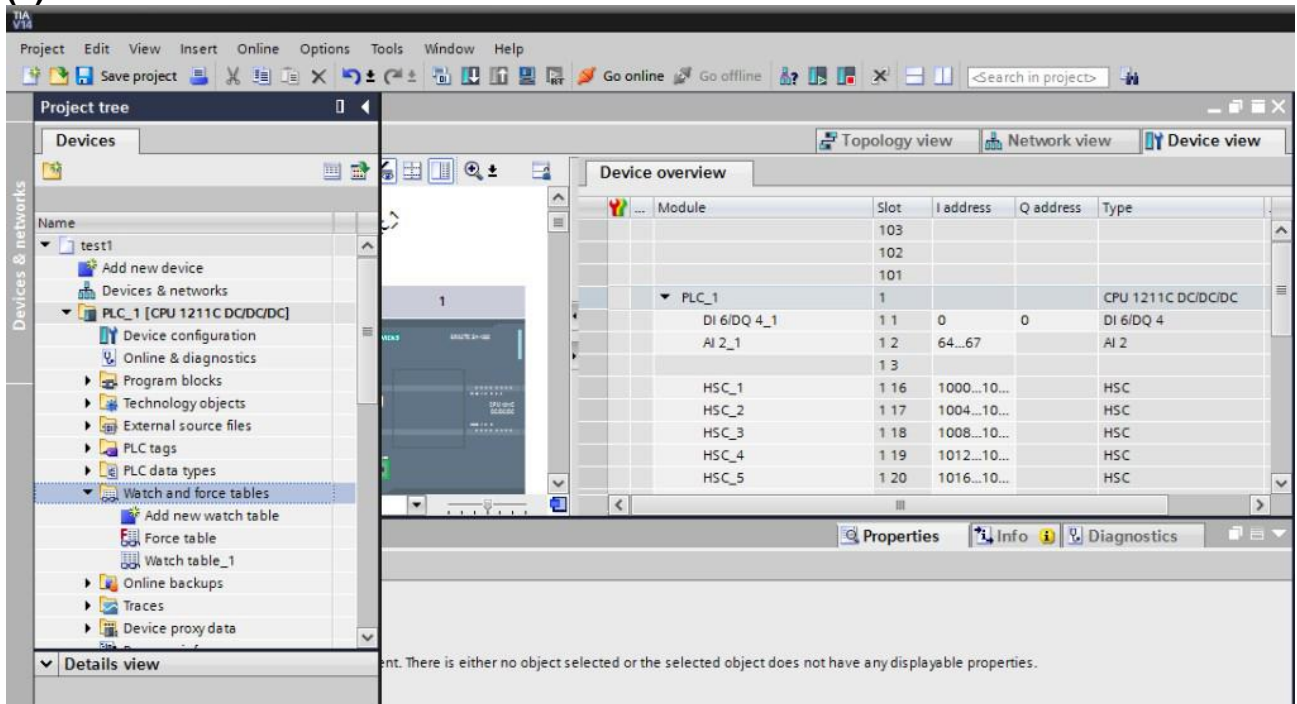

(2) Create new force table → Check 'F' → Force all

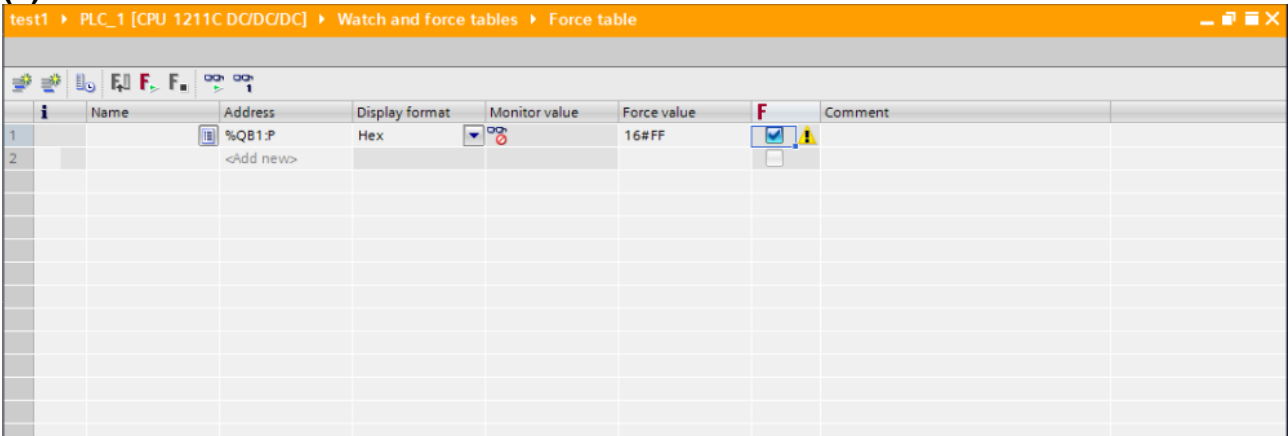

(3) Watch and force table → Watch table

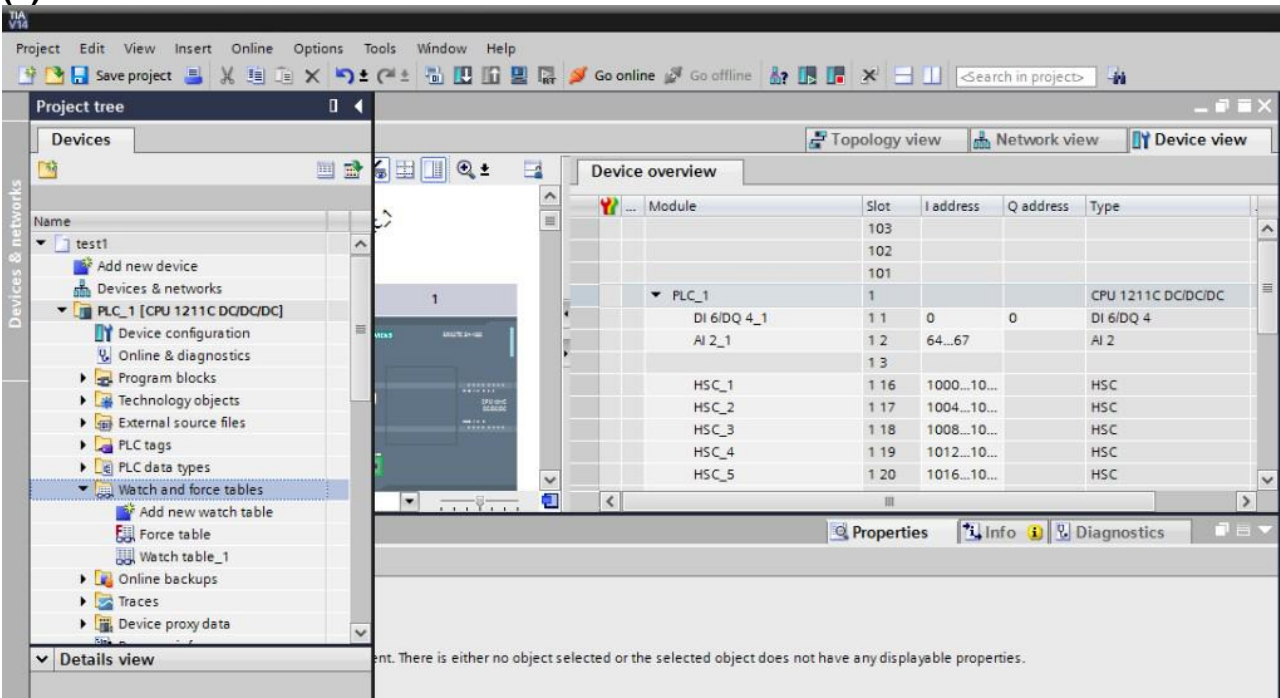


(4) Create new watch table → Start monitoring



9.4. Change I/O parameter

(1) Device view → Check module → General → Module parameters

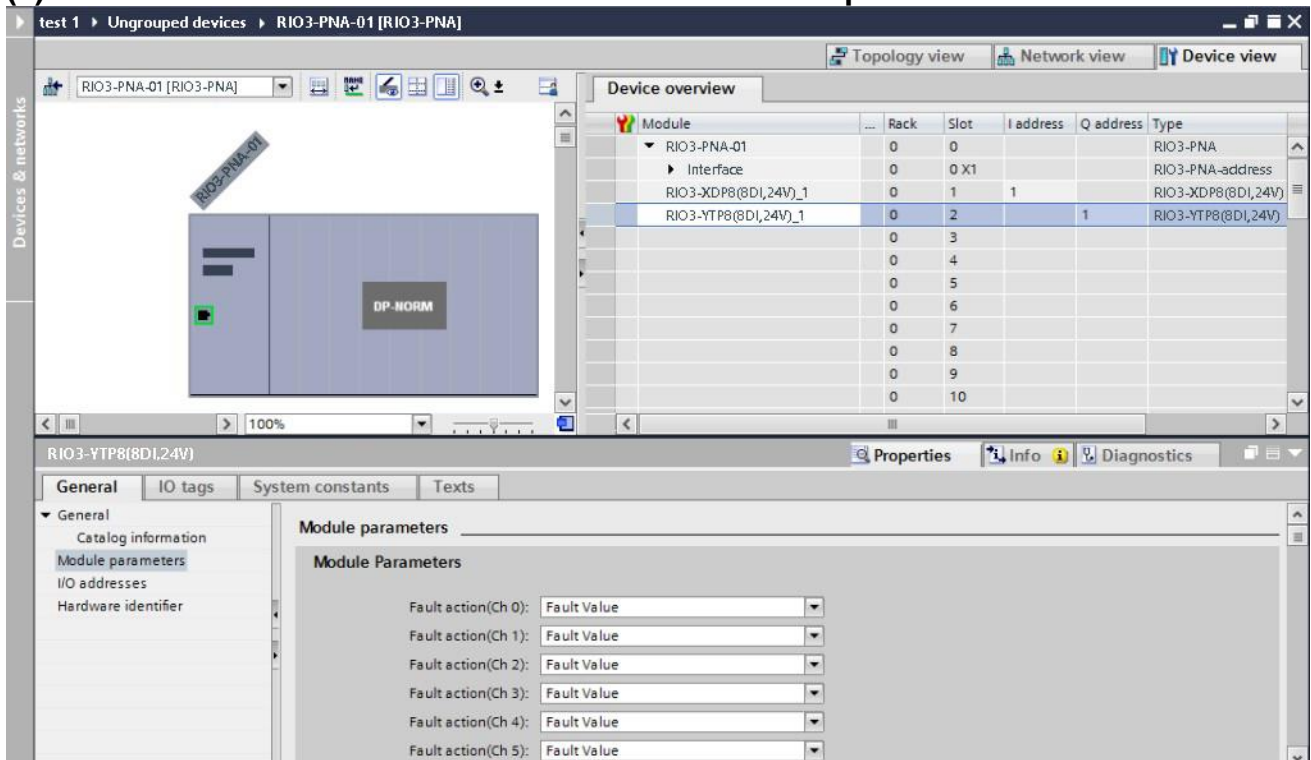

(2) Download to device

10. Troubleshooting

10.1. How to diagnose by LED indicator

LED Status	Cause	Action
All LED turns off	- No power	Check main power Cable
MOD LED Green/Red Toggle	- MODBUS error such as watchdog error, etc.	Check Modbus watchdog time value(see index 0x1020
MOD LED is red	- Occurrence critical error in firmware	Contact Sales team and send module for repair.
LINK LED turns off	- Device may not be powered	Check main power Cable
ACTIVE LED turns off	- Device is idle or may not be powered.	Check main power Cable
IOS LED turns off	- Device may not be powered.	Check main power Cable
IOS LED flashes red	- Adapter has no expansion module	Add one or more expansion modules.
IOS LED is red	One or more expansion module occurred in fault state. - Detected invalid expansion module ID. - Overflowed Input/Output Size - Too many expansion module - Initialization failure - Communication failure. - Changed expansion module configuration. - Mismatch vendor code between adapter and expansion module.	<ul style="list-style-type: none"> - Use expansion slot up to 63. - Compose that IO total size is not excess. - Check status of expansion IO connection. - Check the vendor code of module.
Field Power LED turns off	- Field power is not supplied.	<ul style="list-style-type: none"> - Check main power Cable - Contact Sales team and send module for repair.
System Power LED turns off	- System power is not supplied.	<ul style="list-style-type: none"> - Check main power Cable - Contact Sales team and send module for repair.

APPENDIX A

A.1. Product List

Please refer the separate HX-RIO3 product list document

A.2. Glossary

- System Power : The power for starting up CPU.
- Field Power : The power for input and output line.
- EDS : Electronic Data Sheet.
- Sink : The method of in/output power supply if a device has no power source.
- Source : The method of in/output power supply if a device has the power source.